

# PA-PIN36BLK/C USER MANUAL

## I Technical Specifications:

Item Code:	PA-PIN36BLK/C
Description:	PIN SPOT with motorized rotating COLOR WHEEL
Voltage:	AC 120V 60HZ/50HZ
Bulb:	L4515-G 4515 6V 30W PAR36
Motor:	AC 120V/230V 1~2rpm
Color wheel:	260mm diameter wheel with four color quadrants - Red, Yellow, Blue, Green
Fuse:	125V/1A
Weight:	2.1kg
Size:	L300Xw230XH250 mm
Warranty:	Limited 90-day warranty

## II Operational Instructions:

1. Unpack the carton to check if there is any damaged or missing parts when you receive the unit, call the local dealer if anything is not found in normal condition.
2. Disconnect unit from power when lamping or relamping the unit. Remove the front cover to install lamp. Attach the two wires onto the two lamp screw terminals. There is no polarity for the lamp connection, so it does not matter which wire goes where. It is AC power which will operate either way.
3. Install the color wheel to the motor axial and tighten it with nut, then fix the motor to the top side of the light body. Attach the color wheel motor power cable to the plug located in the back of the Pin Spot unit.
4. Use a proper clamp to hang the unit onto the truss and fasten tightly and securely.
5. Place the unit where there is efficient ventilation, away from any flammable objects and materials.
6. Check that the rated power corresponds to the main supply.

7. Do NOT operate this unit on any kind of DIMMER or DIMMING system. This unit may only be turned On and Off.

### **III Re-lamping:**

1. Disconnect the unit from power supply and allow it to cool down before re-lamping.
2. Remove the front cover and replace the old lamp
3. Replace the front cover.

### **IV Caution:**

1. In order to reach a maximum of safety the following points should be carefully read and observed.
2. Ambient temperature should not exceed 40°.
3. Disconnect from the power supply before opening or replacing the 4515 lamp and fuse. Please be sure the lamp is cool before replacement!
4. To avoid electrical shock, do not touch any live parts when the unit is activated.
5. Call professionals for maintenance, no spare parts are included with the units.
6. The lamp shall be changed if it has become damaged or thermally deformed.
7. Proper installation is required to be performed by electrical professionals.
8. The ventilation should not be impeded by covering the air circulation around any opening or near the fixture. Such as curtains or other obstructive materials.
9. Alternative precautions to switch off the device shall be taken if it is not easy to reach the units.
10. No open flame sources, such as lighted candles, should be placed on the apparatus..
11. The use of apparatus should be in a moderate climate.
12. This fixture is for indoor dry operation only. It must not be

exposed to moisture.

13. Do not allow any thing to rub or impede the color wheel from rotating freely.



For more Information:  
Tel: (407) 857-8770  
Fax: (407) 857-8771  
[www.techni-lux.com](http://www.techni-lux.com)