




MANUAL

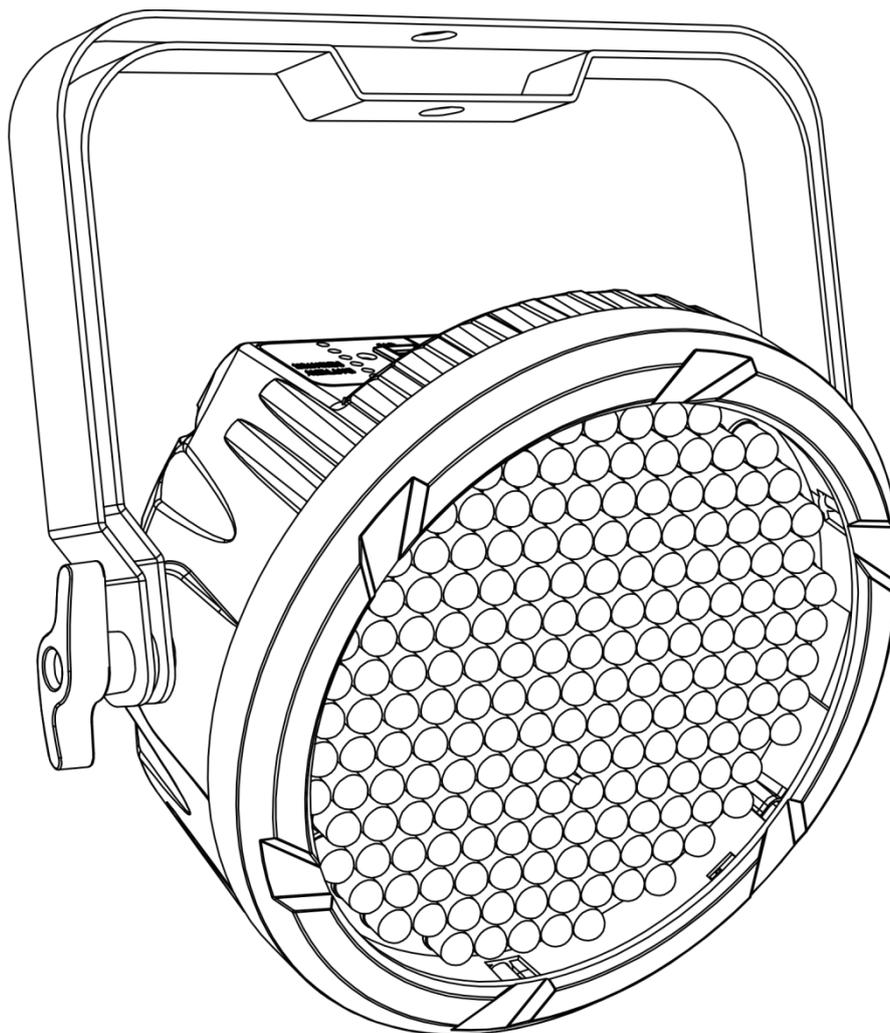

ENGLISH

EventLITE 177IR

V1

Ordercode: 44010

Table of contents

Warning	2
Safety Instructions	2
Operating Determinations	4
Rigging	4
Connection with the mains.....	5
Return Procedure.....	6
Claims.....	6
Description of the device	7
Optional accessories.....	7
Frontside.....	8
Backside	9
Installation	9
Set Up and Operation	9
Charging the built-in battery	10
Control Modes.....	10
One EventLITE (Built-in programs, Auto mode and Static color mode)	10
One EventLITE (Sound mode)	10
Multiple EventLITEs (Master/Slave control)	11
Multiple EventLITEs (DMX Control)	12
Fixture Linking	13
Data Cabling	13
Control Panel.....	14
Control Mode	14
DMX Addressing	14
Menu Overview	15
Main Menu Options	16
1. Built-in programs	16
2. Auto Run Program	17
3. Sound control mode	17
4. DMX Addressing/ DMX configuration	17
5. Slave Mode	17
6. Static Color Mode	18
7. Eco Mode.....	18
Optional remote control	18
1. Built-in Auto Show	20
2. Built-in programs	20
3. Sound-controlled mode	20
4. Dimming mode	20
5. Color mode	20
DMX Channels	21
2 channels	21
3 channels	21
5 channels	21
Maintenance	22
Replacing the Fuse	22
Troubleshooting	22
No Light	22
No Response to DMX.....	22
Product Specifications	24
Dimensions	25
Notes	26

Warning



**For your own safety, please read this user manual carefully
before your initial start-up!**




Unpacking Instructions

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Your shipment includes:

- Showtec EventLITE 1771R
- IEC power cable (1,5 m)
- User manual

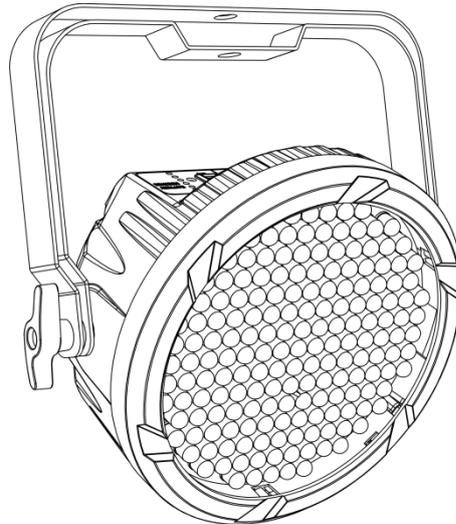

LED Expected Lifespan

LEDs gradually decline in brightness over time. HEAT is the dominant factor that leads to the acceleration of this decline. Packaged in clusters, LEDs exhibit higher operating temperatures than in ideal or singular optimum conditions. For this reason, when all color LEDs are used at their fullest intensity, life of the LEDs is significantly reduced. If improving the lifespan is of higher priority, place care in providing for lower operational temperatures. This may include climatic-environmental and the reduction of overall projection intensity.



CAUTION!

**Keep this device away from rain and moisture!
Unplug mains lead before opening the housing!**



Safety Instructions

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual



**CAUTION! Be careful with your operations.
With a dangerous voltage you can suffer
a dangerous electric shock when touching the wires!**



Before the initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes contained in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

- Never let the power cord come into contact with other cables! Handle the power cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never lift the fixture holding it by the projector-head, as the mechanics may be damaged. Always hold the fixture by the transport handles.
- Never place any material over the lens.
- Never look directly into the light source.
- Never leave any cables lying around.
- Do not insert objects into air vents.
- Do not connect this device to a dimmerpack.
- Do not switch the device on and off in short intervals, as this will reduce the device's life.
- Do not touch the device's housing bare-handed during its operation (housing becomes very hot). Allow the fixture to cool for at least 5 minutes before handling.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Only use the device indoors, avoid contact with water or other liquids.
- Only operate the fixture after having checked if the housing is firmly closed and all screws are tightly fastened.
- Only operate the device after having familiarized with its functions.
- Avoid flames and do not put close to flammable liquids or gases.
- Always keep the case closed while operating.
- Always allow a free air space of at least 50 cm around the unit for ventilation.
- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power cord holding it by the plug. Never pull out the plug by tugging the power cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power cord is never crimped or damaged. Check the device and the power cord from time to time.
- If the lens is obviously damaged, it has to be replaced.
- If device was dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue the use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. The fixture must be installed beyond the reach of children. Never leave the unit running unattended.
- Never attempt to bypass the thermostatic switch or fuses.
- For replacement use fuses of same type and rating only.

- The user is responsible for correct positioning and operating of the EventLITE 177IR. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- WARRANTY: Till one year after date of purchase.



Operating Determinations

- This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.
- The minimum distance between light output and the illuminated surface must be bigger than 1 meter.
- The maximum ambient temperature $t_a = 40^\circ\text{C}$ must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of 40°C .
- If this device is operated in any other way than the one described in this manual, the product may suffer damages and the warranty becomes void.
- Any other operation may lead to dangers like short-circuit, burns, electric shock, crash, etc.

You endanger your own safety and the safety of others!

Rigging


Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.

Do not attempt the installation yourself !

Always let the installation be carried out by an authorized dealer !

Procedure:

- If the EventLITE 177IR is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the EventLITE 177IR, with the mounting bracket, to the trussing system.
- The EventLITE 177IR must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety cable.
- When rigging, derigging or servicing the EventLITE 177IR, always make sure, that the area below the installation site is secured and that there are not any unauthorized people around.

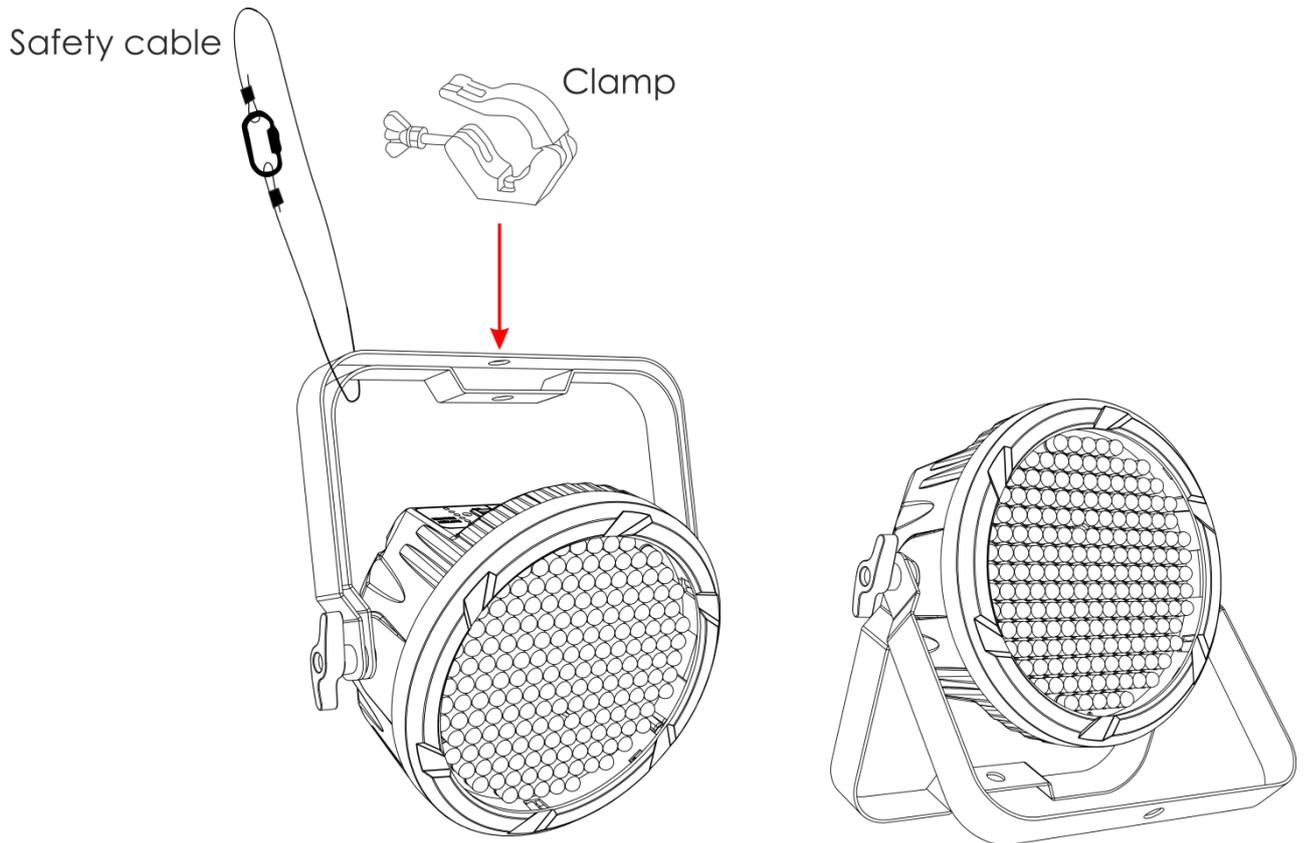

The EventLITE 177IR can be placed on a flat stage floor or mounted to any kind of truss with a clamp.

Improper installation can cause serious injuries and/or damage of property!

Connection with the mains

Connect the device to the mains with the power-plug.
Always check if the right color cable is connected to the right place.

International	EU Cable	UK Cable	US Cable	Pin
L	BROWN	RED	YELLOW/COPPER	PHASE
N	BLUE	BLACK	SILVER	NEUTRAL
	YELLOW/GREEN	GREEN	GREEN	PROTECTIVE GROUND

Make sure that the device is always properly connected to the earth!

Improper installation can cause serious injuries and/or damage of property!



Return Procedure

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail offersales@highlite.nl and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:

- 01) Your name
- 02) Your address
- 03) Your phone number
- 04) A brief description of the symptoms

Claims

The client has the obligation to check the delivered goods immediately upon delivery for any shortcomings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to report and submit claims with the shipper in the event that a fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless agreed otherwise in writing.

Complaints against us must be prepared in writing or sent by fax within 10 working days after receipt of the invoice. After this period complaints will not be handled anymore.

Complaints will only then be considered if the client has so far complied with all parts of the agreement, regardless of the agreement from which the obligation is resulting.

Description of the device

Features

The Showtec EventLITE 177IR is a compact, lightweight and powerful mobile spot. The special led-matrix and very precise electronics ensures a smooth color mixing.

- Compact size
- Long battery life
- Built-in battery charger and protection
- Smooth color mixing
- Input voltage: 100-240V AC, 50/60Hz
- Power consumption: 30W
- DMX linking: 30 pcs
- Runtime: 6 hrs at full RGB on
- Charging Cycle: 10 hrs (LED blackout when charging)
- DMX channels: 2, 3 or 5 channels
- 4-digit LED display for easy setup
- Light source: 177x 10mm (60xR, 60xG, 57xB) LEDs
- Light output: 700 lux @ 2m
- Color Range: 16,7 million additive RGB colors
- Control modes: Built-in programs, Auto run, DMX, Master/Slave, Sound-controlled, Static colors
- Control protocol: DMX-512
- Dimmer: 0-100%
- Strobe: 0-20Hz
- Protection rate: IP-20
- Beam Angle: 30°
- Housing: ABS plastic
- Connections: IEC IN & 3-pin XLR IN & OUT
- Cooling: Convection
- Operation Temperature: -20°C ~40°C
- Fuse: T1L/250V
- Dimensions: 290 x 110 x 285 mm (LxWxH)
- Weight: 2,06 kg

Note: Knowledge of DMX is required to fully utilize this unit.

Optional accessories

[44002](#) UR-5 Universal IR Remote

Frontside

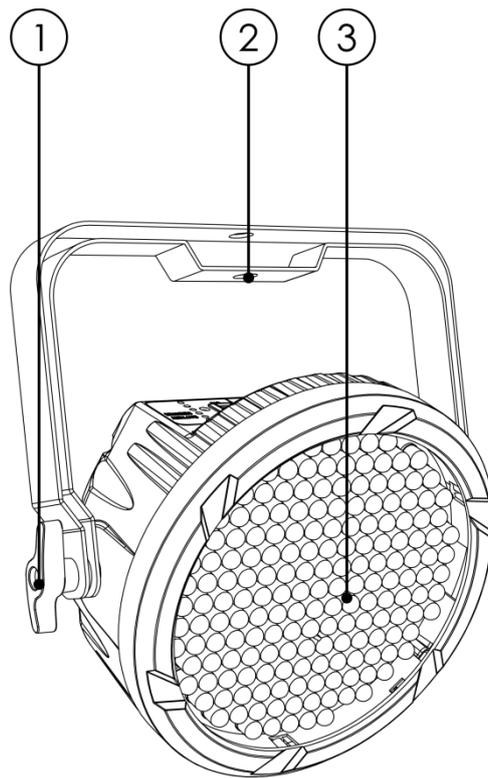
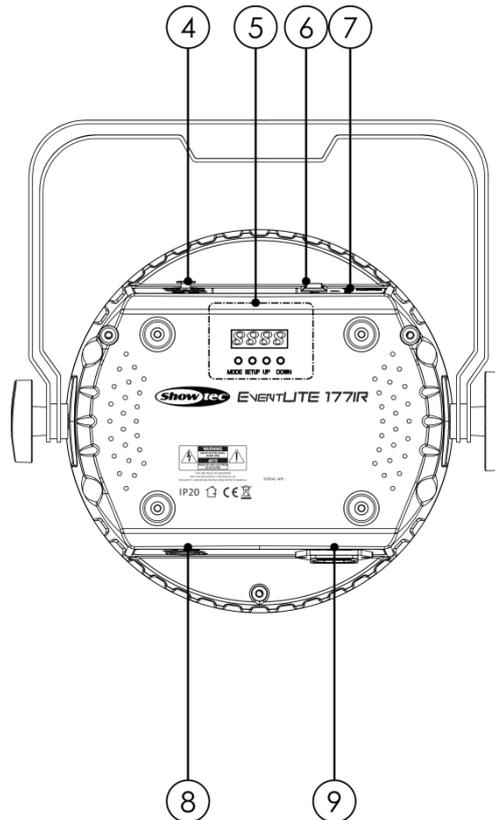


Fig. 01

- 01) Adjustment screw
- 02) Mounting bracket
- 03) 177x 10mm (60xR, 60xG, 57xB) LEDs

Backside**Fig. 02**

- 04) 3-pin DMX signal connector OUT
- 05) 4-digit LED display + menu buttons
- 06) Power switch ON/OFF
- 07) Battery level indicator
- 08) 3-pin DMX signal connector IN
- 09) IEC power connector IN + Fuse T1L/250V

Installation

Remove all packing materials from the EventLITE 1771R. Check if all foam and plastic padding is removed. Connect all cables.

Do not supply power before the whole system is set up and connected properly.

Always disconnect from electric mains power supply before cleaning or servicing.

Damages caused by non-observance are not subject to warranty.

Set Up and Operation

Follow the directions below, as they pertain to your preferred operation mode.

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

Connect the device to the main power supply.

Charging the built-in battery

- 01) In order to charge the battery, you need the included IEC power cable.
- 02) Turn off the power.
- 03) Connect the IEC power cable to the EventLITE 177IR.
- 04) Then plug the other end of the IEC power cable into a proper electric power supply socket.
- 05) While the battery is charging, the **Red** LED from the battery level indicator will light up and the **Green** LEDs from the battery level indicator will light up in sequence.
- 06) When the battery is fully charged, all the **Green** LEDs from the battery level indicator will light up.

Important!

- Do not charge for more than 24 hours.
- Recharge within 3 days of use.
- **Turn off the power with the power switch**, when charging the battery!

Control Modes

There are 6 modes:

- Built-in programs
- Auto mode
- Static color mode
- Sound mode
- Master/Slave
- DMX-512 (2CH, 3CH, 5CH)

One EventLITE (Built-in programs, Auto mode and Static color mode)

- 01) Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
- 02) Always use a safety cable (ordercode 70140 / 70141).
- 03) Plug the end of the electric mains power cord into a proper electric power supply socket.
- 04) When the EventLITE is not connected with a DMX cable, it functions as a stand-alone device. Please see pages 16-18 for more information about the Built-in programs, Auto mode and Static color mode.

One EventLITE (Sound mode)

- 01) Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
- 02) Always use a safety cable (ordercode 70140 / 70141).
- 03) Plug the end of the electric mains power cord into a proper electric power supply socket.
- 04) Turn on the music. If the device is set to Sound mode, then the EventLITE will react to the beat of the music. Please see page 17 for more information about the Sound mode.

Multiple EventLITEs (Master/Slave control)

- 01) Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
- 02) Always use a safety cable (ordercode 70140 / 70141).
- 03) Use a 3-pin XLR cable to connect the EventLITEs and other devices.

The pins:



- 01) Earth
- 02) Signal -
- 03) Signal +

- 04) Link the units as shown in Fig. 03. Connect the first unit's DMX "out" socket with the second unit's "in" socket, using a DMX-signal cable. Repeat this process to link the second, third, and fourth units. You can use the same functions on the master device as described on pages 16-18 (Built-in programs, Auto mode, Static color mode or Sound mode). This means that you can set your desired operation mode on the master device and all slave devices will react the same as the master device.

Multiple EventLITEs (Master/Slave control)


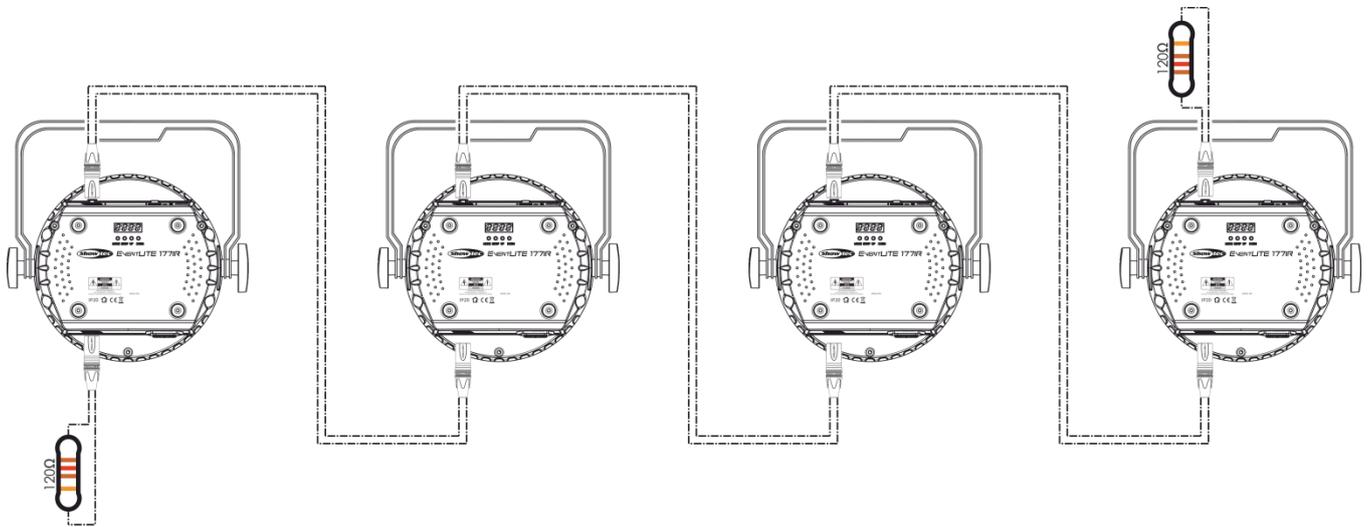


Fig. 03

Multiple EventLITEs (DMX Control)

- 01) Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
- 02) Always use a safety cable (ordercode 70140 / 70141).
- 03) Use a 3-pin XLR cable to connect the EventLITEs and other devices.

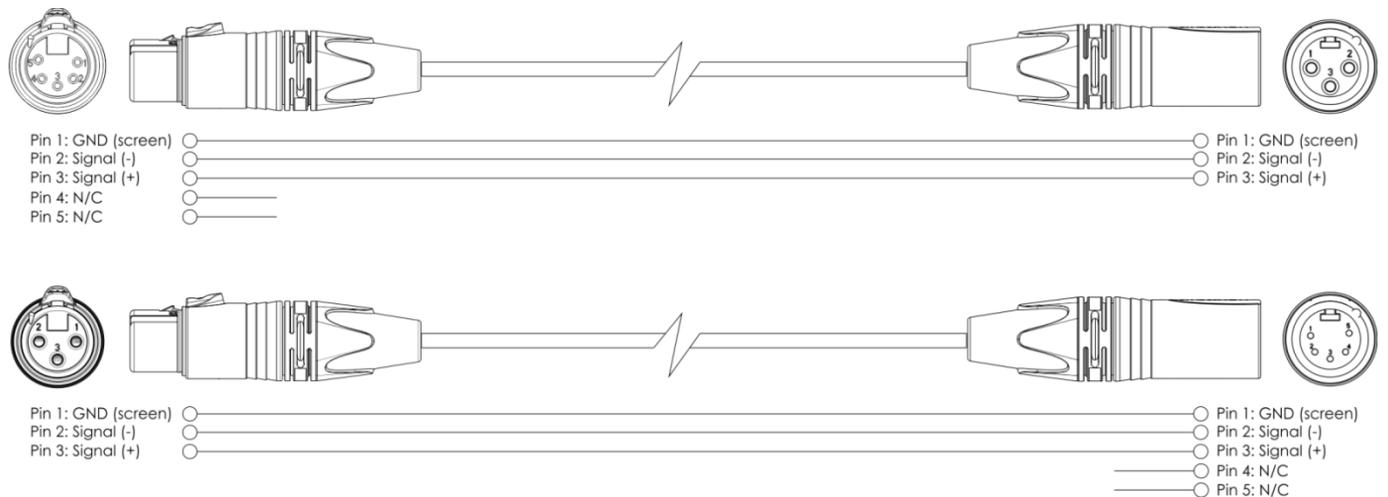

- 04) Link the units as shown in Fig. 04. Connect the first unit's DMX "out" socket with the second unit's "in" socket, using a DMX-signal cable. Repeat this process to link the second, third, and fourth units.
- 05) Supply electric power: Plug electric mains power cords into each unit's IEC socket, then plug the other end of the mains power cord into proper electric power supply sockets, starting with the first unit. Do not supply power before the whole system is set up and connected properly.

Multiple EventLITEs DMX Set Up

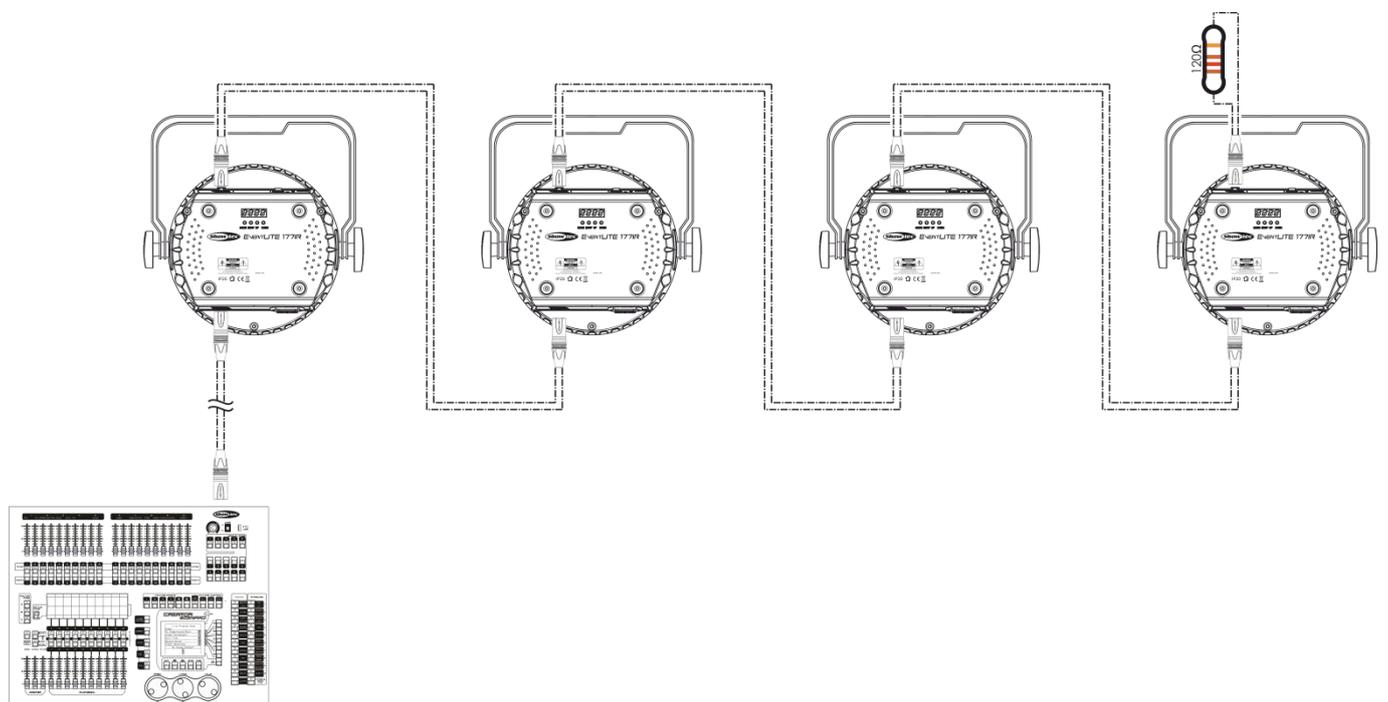


Fig. 04

Note : Link all cables before connecting electric power

Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows of two or more fixtures set to a master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

Important: Fixtures on a serial data link must be daisy-chained in a single line. To comply with the EIA-485 standard, no more than 30 devices should be connected on one data link. Connecting more than 30 fixtures on one serial data link without the use of a DMX optically isolated splitter may result in deterioration of the digital DMX signal.

Maximum recommended DMX data link distance: 100 meters
Maximum recommended number of fixtures on a DMX data link: 30 fixtures



Data Cabling


To link fixtures together, you must obtain data cables. You can purchase DAP Audio certified DMX cables directly from a dealer/distributor or construct your own cable. If you choose to create your own cable, please use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

DAP Audio DMX Data Cables

- DAP Audio Basic microphone cable for allround use. bal. XLR/M 3-pin > XLR/F 3-pin. **Ordercode** FL01150 (1,5 m), FL013 (3 m), FL016 (6 m), FL0110 (10 m), FL0115 (15 m), FL0120 (20 m).
- DAP Audio X-type data cable XLR/M 3-pin > XLR/F 3-pin. **Ordercode** FLX0175 (0,75 m), FLX01150 (1,5 m), FLX013 (3 m), FLX016 (6 m), FLX0110 (10 m).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. **Ordercode** FL71150 (1,5 m), FL713 (3 m), FL716 (6 m), FL7110 (10 m).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. **Ordercode** FL7275 (0,75 m), FL72150 (1,5 m), FL723 (3 m), FL726 (6 m), FL7210 (10 m).
- DAP Audio 110 Ohm cable with digital signal transmission. **Ordercode** FL0975 (0,75 m), FL09150 (1,5 m), FL093 (3 m), FL096 (6 m), FL0910 (10 m), FL0915 (15 m), FL0920 (20 m).
- DAP Audio DMX adapter: 3-pin/5-pin. **Ordercode** FLA30.

The EventLITE 177IR can be operated with a controller in control mode or without the controller in stand-alone mode.

Control Panel

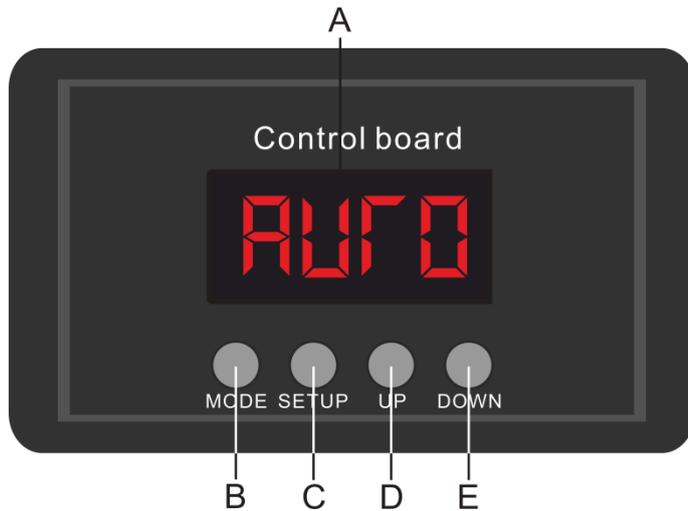

- A) LED display
- B) MODE button
- C) SETUP button
- D) UP button
- E) DOWN button

Fig. 05

Control Mode

The fixtures are individually addressed on a data-link and connected to the controller. The fixtures respond to the DMX signal from the controller. (When you select the DMX address and save it, the controller will display the saved DMX address, next time.)

DMX Addressing

The control panel on the backside of the device allows you to assign DMX fixture addresses, which is the first channel with which the EventLITE will respond to the controller. Please note, when you use the controller, the unit has **5** channels.

When using multiple EventLITEs, make sure you set the DMX addresses right. Therefore, the DMX address of the first EventLITE should be **1(d001)**; the DMX address of the second EventLITE should be **1+5=6 (d006)**; the DMX address of the third EventLITE should be **6+5=11 (d011)**, etc. Please, be sure that you do not have any overlapping channels in order to control each EventLITE correctly. If two or more EventLITEs are addressed similarly, they will work similarly.

Controlling:

After having addressed all EventLITEs, you may now start operating these via your lighting controller.

Note: After switching on, the EventLITE will automatically detect whether DMX 512 data is received or not. If there is no data received at the DMX-input, the "LED" on the control panel will not flash.

The problem may be:

- The XLR cable from the controller is not connected with the input of the EventLITE.
- The controller is switched off or defective, the cable or connector is defective, or the signal wires are swapped in the input connector.

Note: It is necessary to insert an XLR termination plug (with 120 Ohm) in the last fixture in order to ensure proper transmission on the DMX data link.


⚠ Display Off after 25 seconds ⚠

When no button is pressed for 25 seconds, the display will turn off. To light up the display, you have to press the MODE, SETUP, UP or DOWN button. Once you have pressed the button, the display will light up.

⚠ Lock mode after 60 seconds ⚠

Display board will blackout and show **LOCK** if there is no operation within 60s. Press the **MODE** and **DOWN** button simultaneously for 3s at least to **unlock** the display board.

Menu Overview

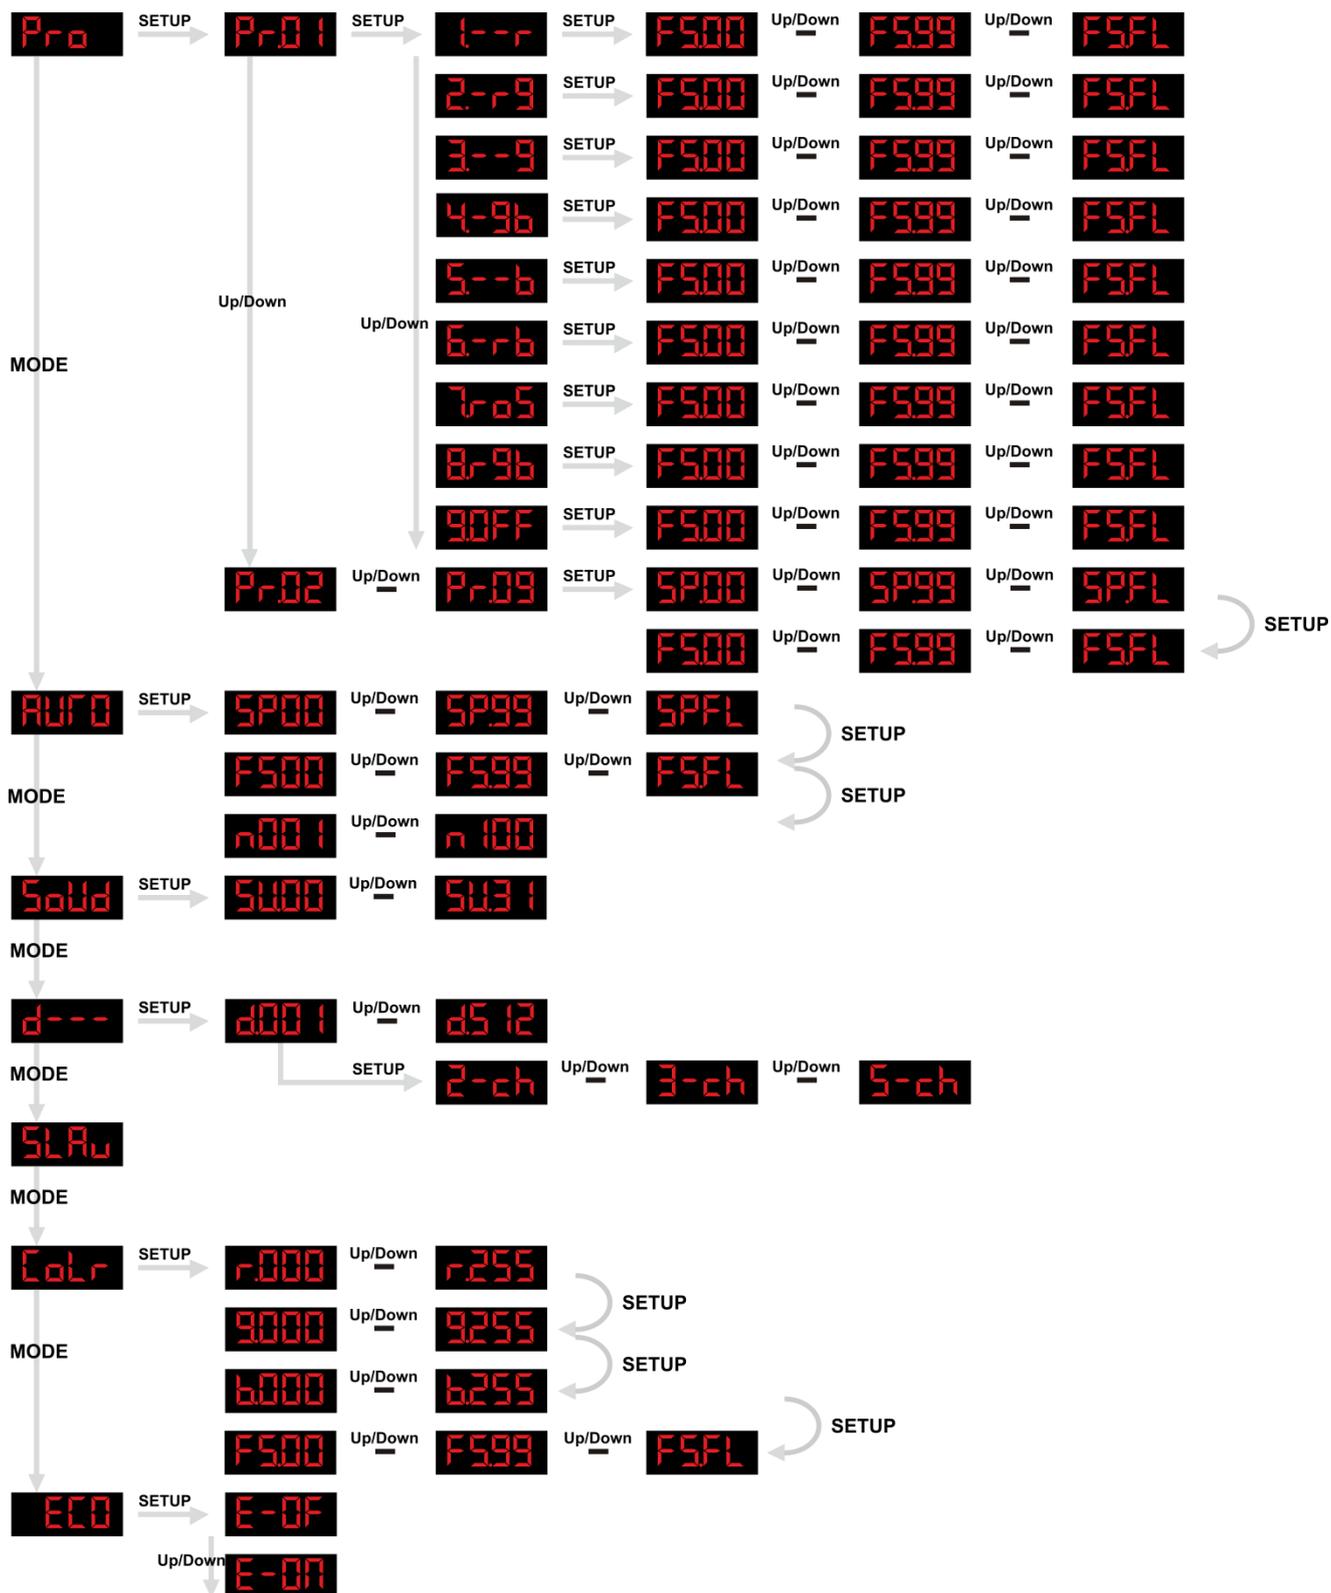


Main Menu Options

- Pro** Built-in programs
- AUTO** Auto run
- SoUd** Sound-controlled Mode
- d---** DMX address / DMX configuration
- SLAV** Master-Slave
- CoLr** Static Color Mode
- ECO** Eco Mode

1. Built-in programs

With this menu you can set the built-in programs.

- 01) Press the **MODE** button until the display shows **Pro**.
- 02) Press the **SETUP** button to open this menu.
- 03) You can use the **UP/DOWN** buttons to scroll through the 9 built-in programs.
- 04) When you select menu **P-01**, you can choose 8 preset colors and blackout. Press **SETUP** to enter and choose one with the **UP/DOWN** buttons.

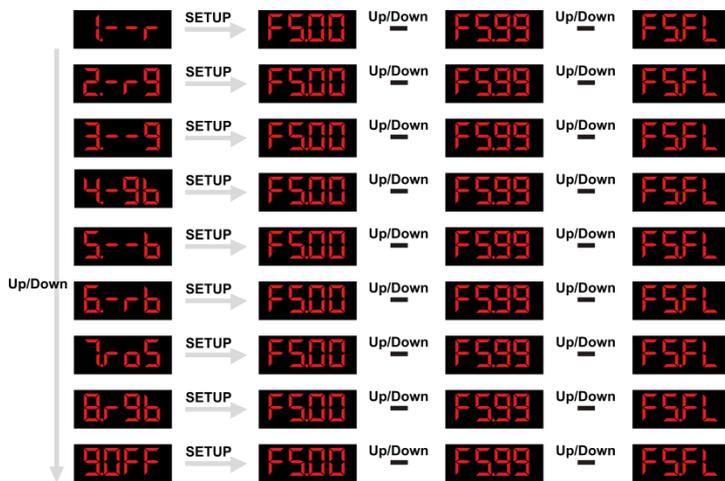


- 05) Press the **SETUP** button again to open the next menu. You can set the strobe frequency with the **UP/DOWN** buttons between **F500**, **F599**, and **F5FL**.
- 06) Press the **SETUP** button again and use the **UP/DOWN** buttons until the display shows **P-02**.
- 07) Use the **UP/DOWN** buttons to scroll between **P-02** and **P-09**.
- 08) In menu **P-02** and **P-09**, you can switch between the strobe frequency and the Program Running Speed by pressing the **SETUP** button.
- 09) Use the **UP/DOWN** buttons to change the values.



2. Auto Run Program

With this menu you can set the Auto run mode of the EventLITE 177IR.

- 01) Press the **MODE** button on the device until the display shows **AUTO**.
- 02) The EventLITE will immediately start the Auto Run program.
- 03) Press the **SETUP** button to enter the menu.

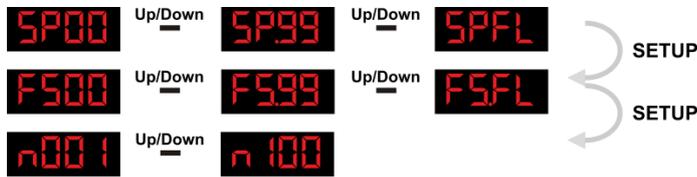

- 04) With **SP00** **SP99** **SPFL** you can set the speed of the Auto program.
- 05) With **FS00** **FS99** **FSFL** you can set the strobe frequency.
- 06) With **n001** **n100** you can set the number of repetitions of each step of the Auto run program.
- 07) You can scroll through these options with the **SETUP** button.
- 08) With the **UP/DOWN** buttons you can adjust the options.

3. Sound control mode

With this menu you can set the sensitivity of the sound mode.

- 01) Press the **MODE** button until the display shows **Sound**.
- 02) Press the **SETUP** button to open this menu.
- 03) Press the **UP/DOWN** buttons to change the sensitivity of the sound control mode between **S400** **S431**, from low to high sound sensitivity.
- 04) Sound-controlled mode is now active and the device will react to the beat of the background music.

4. DMX Addressing/ DMX configuration

With this menu you can set the DMX address and choose a DMX configuration.

- 01) Press the **MODE** button until the display shows **d---**.
- 02) Press the **SETUP** button to open this menu. You can choose 512 different DMX addresses.
- 03) Use the **UP/DOWN** buttons to select the required address from **d001** **d512**.
Once you have set the desired DMX address, you can also choose the desired DMX Mode.
- 04) Press the **SETUP** button again to choose one of the 3 different DMX Modes. Use the **UP/DOWN** buttons to select 2, 3 or 5 channels in DMX mode.



5. Slave Mode

With this menu you can set the device as a Slave.

- 01) Press the **MODE** button until the display shows **SLAVE**.
- 02) If the device has not been set to slave, it is automatically classified as a master device. All slave devices will follow the master movement. If the device has been set to slave, it will react the same as its master device.

6. Static Color Mode

With this menu you can manually set a desired color.

- 01) Press the **MODE** button until the display shows **Colr**.
- 02) Press the **SETUP** button to open this menu.
- 03) You can use the **SETUP** button to scroll through 3 color options and also set the strobe frequency.
- 04) Use the **UP/DOWN** buttons to change the values.

 


- 05) You can combine Red, Green and Blue to create an infinite range of colors (0-255).

7. Eco Mode


With this menu you can set the EventLITE 177IR to its economy mode.

- 01) Press the **MODE** button until the display shows **ECO**.
- 02) Use the **UP/DOWN** buttons to choose between normal mode and economy mode.



- 03) When you choose "E - OFF" the EventLITE 177IR will have 100% of the luminance, this is the normal mode.
- 04) When you choose "E - ON" the EventLITE 177IR will have 70% of the luminance, this is the economy mode.

Optional remote control

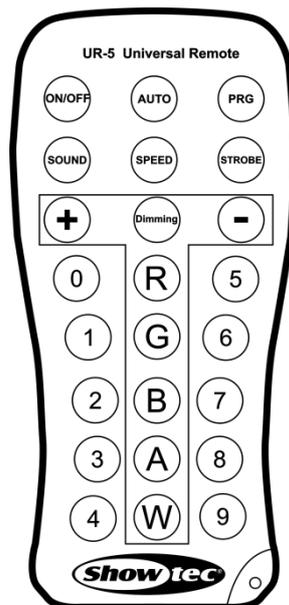

Button	Function	Description
	On / Off	Switch the device ON or OFF
	Auto Mode	Activate Built-in Auto Show mode
	Program Mode	Activate Built-in Programs Show mode
	Sound-controlled Mode	Activate Sound-controlled mode
	Speed Mode	Activate Speed Mode
	Strobe Mode	Activate Strobe Mode
	Dimming Mode	Activate Dimming Mode
	Plus	Increase value button
	Minus	Decrease value button
	Red	Activate the Red color
	Green	Activate the Green color
	Blue	Activate the Blue color
	Amber	Activate the Amber color
	White	Activate the White color
	Cyan	Activate the Cyan color
	Purple	Activate the Purple color
	Purplish red	Activate the Purplish red color
	Orange	Activate the Orange color
	White	Activate the White color
	Bright pink	Activate the Bright pink color
	Light green	Activate the Light green color
	Water blue	Activate the Water blue color
	Yellow	Activate the Yellow color
	Warm white	Activate the Warm white color

1. Built-in Auto Show

- 01) Press the  button to activate the Built-in Auto Show mode.
- 02) The EventLITE will automatically start with its built-in program.
- 03) In this mode you can control the speed of the program by pressing the  button.
- 04) With the  and  buttons you can set the speed between     .
- 05) You can also set the strobe frequency by pressing the  button.
- 06) With the  and  buttons you can set the strobe frequency between     .

2. Built-in programs

- 01) Press the  button to activate the Built-in programs mode.
- 02) With the  and  buttons you can choose between   .
- 03) In this mode you can control the speed of the program by pressing the  button.
- 04) With the  and  buttons you can set the speed between     .
- 05) You can also set the strobe frequency by pressing the  button.
- 06) With the  and  buttons you can set the strobe frequency between     .

3. Sound-controlled mode

- 01) Press the  button to activate the Sound-controlled mode.
- 02) With the  and  buttons you can set the sensitivity between   .

4. Dimming mode

- 01) Press the  button to activate the dimming mode.
- 02) Now you can choose one of the RGB colors by pressing the  ,  or  button.
- 03) With the  and  buttons you can set the intensity of the individual colors between    ,    or   .
- 04) With this mode you can create your desired color.
- 05) You can also set the strobe frequency by pressing the  button.
- 06) With the  and  buttons you can set the strobe frequency between     .

5. Color mode

- 01) You can select pre-programmed colors between the  and the  button.
- 02) Please see page 19 to find out which colors are pre-programmed.
- 03) It's also possible to select one of the RGBWA pre-programmed colors by pressing the  ,  ,  ,  or  button.
- 04) You can also set the strobe frequency by pressing the  button.
- 05) With the  and  buttons you can set the strobe frequency between     .

DMX Channels

2 channels

Channel 1 – Preset Colors & Built-in Programs & Sound mode

0-9	No function
10-19	Red
20-29	Yellow
30-39	Green
40-49	Cyan
50-59	Blue
60-69	Purple
70-79	Pink
80-89	White
90-99	Program 1
100-109	Program 2
110-119	Program 3
120-129	Program 4
130-139	Program 5
140-149	Program 6
150-159	Program 7
160-169	Program 8
170-255	Sound mode

Channel 2 – Program speed (CH1 must be set between 90-169)

0-255	Gradual speed adjustment, from slow to fast
-------	---

Channel 2 – Sound mode (CH1 must be set between 170-255)

0-255	Gradual adjustment Sensitivity, from 1-100%
-------	---

3 channels

Channel 1 – Red Dimmer intensity

0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

Channel 2 – Green Dimmer intensity

0-255	Gradual adjustment Green from 0 – 100%
-------	--

Channel 3 – Blue Dimmer intensity

0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

5 channels

Channel 1 – Red Dimmer intensity (CH4 must be set between 001-255)

0-255	Gradual adjustment Red from 0 – 100%
-------	--------------------------------------

Channel 2 – Green Dimmer intensity (CH4 must be set between 001-255)

0-255	Gradual adjustment Green from 0 – 100%
-------	--

Channel 3 – Blue Dimmer intensity (CH4 must be set between 001-255)

0-255	Gradual adjustment Blue from 0 – 100%
-------	---------------------------------------

Channel 4 – Master Dimmer intensity

0-255	Gradual adjustment, from dark to brightest 0-100%
-------	---

Channel 5 – Linear strobe (CH1, CH2, or CH3 and CH4 must be set between 001-255)

0-255	Strobe flash frequency, from slow to fast (0-20 Hz)
-------	---

Maintenance

The operator has to make sure that safety-related and machine-technical installations are to be inspected by an expert after every year in the course of an acceptance test.

The operator has to make sure that safety-related and machine-technical installations are to be inspected by a skilled person once a year.

The following points have to be considered during the inspection:

- 01) All screws used for installing the device or parts of the device have to be tightly connected and must not be corroded.
- 02) There may not be any deformations on housings, fixations and installation spots.
- 03) Mechanically moving parts like axles, eyes and others may not show any traces of wearing.
- 04) The electric power supply cables must not show any damages or material fatigue.

The EventLITE 177IR requires almost no maintenance. However, you should keep the unit clean.

Otherwise, the fixture's light-output will be significantly reduced. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Wipe lens clean with glass cleaner and a soft cloth. Do not use alcohol or solvents.

The front lens will require weekly cleaning, as smoke-fluid tends to build up residues, reducing the light-output very quickly.

Keep connections clean. Disconnect electric power, and then wipe the DMX and audio connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

Replacing the Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out.

If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below:

- 01) Unplug the unit from electric power source.
- 02) Insert a flat-headed screwdriver into a slot in the fuse cover. Gently pry up the fuse cover. The fuse will come out.
- 03) Remove the used fuse. If brown or unclear, it is burned out.
- 04) Insert the replacement fuse into the holder. Reinsert the fuse cover. Be sure to use a fuse of the same type and specification. See the product specification label for details.

Troubleshooting

This troubleshooting guide is meant to help solve simple problems.

If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

No Light

If the light effect does not operate properly, refer servicing to a technician.

Suspect three potential problem areas as: the power supply, the LEDs, the fuse.

- 01) Power supply. Check that the unit is plugged into an appropriate power supply.
- 02) The LEDs. Return the EventLITE 177IR to your Showtec dealer.
- 03) The fuse. Replace the fuse. See page 22 for replacing the fuse.
- 04) If all of the above appears to be O.K., plug the unit in again.
- 05) If you are unable to determine the cause of the problem, do not open the EventLITE 177IR, as this may damage the unit and the warranty will become void.
- 06) Return the device to your Showtec dealer.

No Response to DMX

Suspect the DMX cable or connectors, a controller malfunction, a light effect DMX card malfunction.

- 01) Check the DMX setting. Make sure that DMX addresses are correct.
- 02) Check the DMX cable: Unplug the unit; change the DMX cable; then reconnect to electrical power. Try your DMX control again.
- 03) Determine whether the controller or light effect is at fault. Does the controller operate properly with other DMX products? If not, take the controller in for repair. If so, take the DMX cable and the light effect to a qualified technician.

Problem	Probable cause(s)	Solution
One or more fixtures do not function at all	No power to the fixture	<ul style="list-style-type: none"> Check if power is switched on and cables are plugged in
	Primary fuse blown	<ul style="list-style-type: none"> Replace fuse
Fixtures reset correctly, but all respond erratically or not at all to the controller	The controller is not connected.	<ul style="list-style-type: none"> Connect controller.
	3-pin XLR Out of the controller does not match XLR Out of the first fixture on the link (i.e. signal is reversed)	<ul style="list-style-type: none"> Install a phase reversing cable between the controller and the first fixture on the link
Fixtures reset correctly, but some respond erratically or not at all to the controller	Poor data quality	<ul style="list-style-type: none"> Check data quality. If much lower than 100 percent, the problem may be a bad data link connection, poor quality or broken cables, missing termination plug, or a defective fixture disturbing the link
	Bad data link connection	<ul style="list-style-type: none"> Inspect connections and cables. Correct poor connections. Repair or replace damaged cables
	Data link not terminated with 120 Ohm termination plug	<ul style="list-style-type: none"> Insert termination plug in output jack of the last fixture on the link
	Incorrect addressing of the fixtures	<ul style="list-style-type: none"> Check address setting
	One of the fixtures is defective and disturbs data transmission on the link	<ul style="list-style-type: none"> Bypass one fixture at a time until normal operation is restored: unplug both connectors and connect them directly together. Have the defective fixture serviced by a qualified technician
	3-pin XLR Out on the fixtures does not match (pins 2 and 3 reversed)	<ul style="list-style-type: none"> Install a phase-reversing cable between the fixtures or swap pin 2 and 3 in the fixture that behaves erratically
No light or LEDs cuts out intermittently	Fixture is too hot	<ul style="list-style-type: none"> Allow the fixture to cool down Clean the fan Make sure air vents in control panel and the front lens are not blocked Turn up the air conditioning
	LEDs damaged	<ul style="list-style-type: none"> Disconnect the fixture and return it to your dealer
	The power supply settings do not match local AC voltage and frequency	<ul style="list-style-type: none"> Disconnect fixture. Check settings and correct if necessary

Product Specifications

Model:	Showtec EventLITE 177IR
Input Voltage:	100-240V AC, 50/60Hz
Power consumption:	30W (full output)
DMX linking:	30pcs
Battery storage:	8Ah
Operating time at full RGB:	6 hours
Operation temperature:	-20° to +40°
Charging time:	10 hours
Protection rate:	IP-20
Fuse:	T1L/250V
Dimensions:	290 x 110 x 285 mm (LxWxH)
Weight:	2,06 kg
Operating and Programming:	
Signal pin OUT:	Pin 1 (earth), pin 2 (-), pin 3 (+)
DMX Mode:	2, 3 or 5 channels
Signal input:	3-pin DMX IN
Signal output:	3-pin DMX OUT
Electro-mechanical effects:	
LED Quantity:	177x 10mm (60xR, 60xG, 57xB) LEDs
Light output:	700 lux @ 2m
Color mixing:	RGB
Beam angle:	30°
Dimmer:	0-100%
Strobe:	0-20Hz
Housing:	ABS plastic
DMX-control:	via standard DMX-controller
On Board:	4-digit LED display for easy setup
Control:	Built-in programs, Auto run, DMX, Master/Slave, Sound-controlled, Static colors
Connections:	IEC IN & 3-pin XLR IN & OUT
Cooling:	Convection
Max. ambient temperature t_a :	40°C
Max. housing temperature t_B :	80°C
Minimum distance:	
Minimum distance from flammable surfaces:	0,5 m
Minimum distance to lighted object:	1 m



Design and product specifications are subject to change without prior notice.



Website: www.Showtec.info

Email: service@highlite.nl

Dimensions

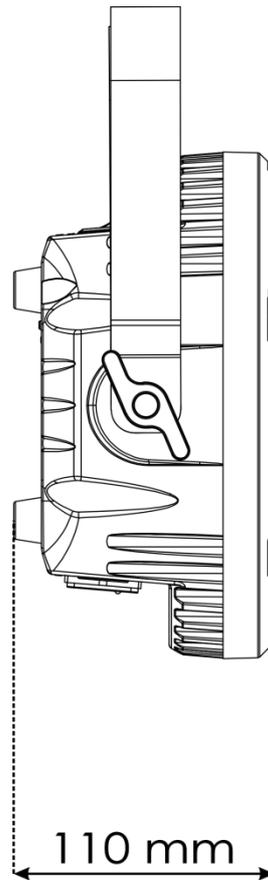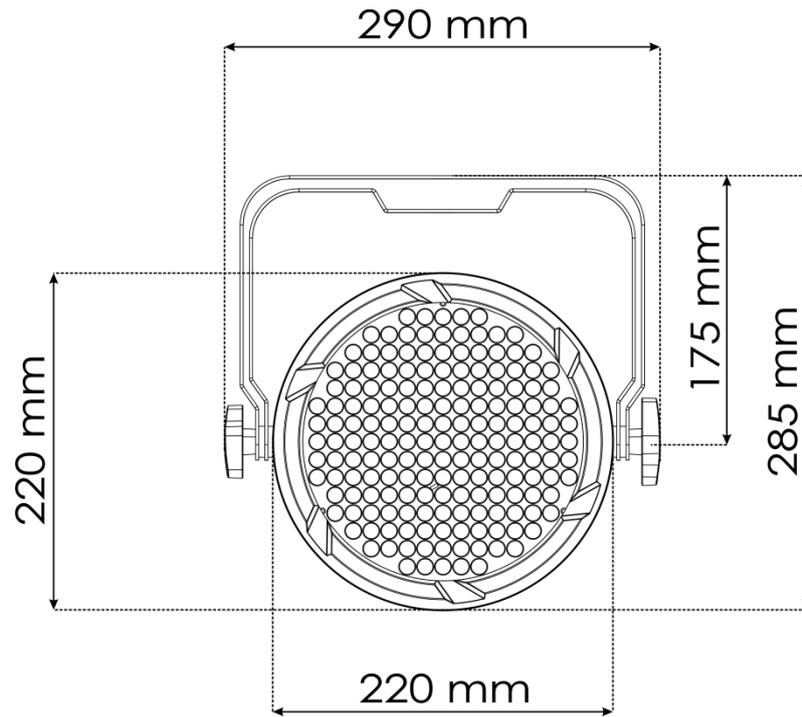



Distributor:



Phone: 407-857-8770
Fax: 407-857-8771
Email: sales@techni-lux.com