

# OUTSTATION OS1

FOR SOFTWARE  
VERSION No.2.0



## INTRODUCTION

### OS1 - Outstation OS1 Control Desk

The **Outstation OS1** is a 60 Channel, 60 Scene (Pages 1-5), 12 Chase (Page 6) DMX programmable control desk that is ideal as an architectural controller and as a remote for our Chromarange Products.

The Chase step times are user programmable between 0.1 seconds and 24 hours. With 30 steps available it is therefore possible to have 4 events per day over a week.

It is beautifully finished in stainless steel, fitted with chrome push buttons and a blue display, so it will fit into any decor.

The **OS1** is ideal for offices, bars, restaurants, foyers in fact anywhere an easy to use, and program, DMX controller is required.

The **OS1** is powered with a Low Voltage Supply (LVS) of +12...25Vdc @ 50...25mA connected to pin 5 of the provided 5 pin XLR or by hardwiring to the lever operated terminal block on the Printed Circuit Board (PCB) – see Connections.

## CONNECTIONS

**DIGITAL AND LOW VOLTAGE SUPPLY CONNECTIONS** are made by using the 5 pin XLR plug provided or hardwiring to the lever operated terminal block on the PCB.

The connections are indicated on the PCB and are:

DMX SIGNAL AND LV SUPPLY	Cable Colours
Pin 1 = $\equiv$ Chassis Earth - Screen	Black Sleeve
Pin 2 = Signal -	Blue
Pin 3 = Signal +	White
Pin 4 = no connection	Green
Pin 5 = Low Voltage Supply In	Red
+12...25Vdc @ 50...25mA	

The LVS is available from most PULSAR products.

On the ChromaZone and ChromaBank, set DIL switch 12 up. The blue LED will illuminate to show the LVS is connected to pin 5 of the male XLR socket

On products that contain a User Interface Module (UIM), such as the ChromaFlood, ChromaBatten and ChromaBankIP, the LVS may be switched on or off from the menu.

The DMX outputs are protected against accidental application of mains voltages and static.

## DISPLAY

**LED DISPLAY** A blue, 4 digit LED display is used to indicate the status of the OS1 when keys are pressed.

At switch on, the software version number is displayed.

After a short delay, the current page and button numbers are displayed; these being the ones last pressed before switch off.

If a Chase is running, the decimal points in the display sequence to indicate this.

## PRE-PROGRAMMED SCENES

Pages 1-5 have pre-defined Scenes, Page 6 has 12 Chases; please see the sheet *Outstation OS1 - Pre Programmed (Chroma) Scene Pages* for details. However you may re-program these as required (see Programming section below).

Pressing any single button reveals the name of the Scene or Chase on that button (as shown in the **Display** column of the tables).

Releasing the button activates that Scene or Chase and shows fade time in seconds in the left 2 digits and button number in the right 2 digits.

When the crossfade time has counted down, the display reverts to showing the current page number in the left digit and button number in the right 2 digits.

## REMOTE CONTROL OF MASTERPIECE

The OS1 can switch between DMX operation and PMX/RS232 operation for Remote Control of a Masterpiece using Menu Option 8 (see Programming section below). A cable (Pulsar 21850) is available to power the OS1 and carry data.

All 6 Pages have alternative pre-defined Masterpiece functions; please see the sheet *Outstation OS1 - Remote Control of Masterpiece by PMX/RS232* for details. However you may re-program these as required (see Programming section below).

Pressing any single button reveals the name of the Masterpiece function on that button (as shown in the **Default** column of the tables).

Releasing the button activates that function and shows page number in the left digit and button number in the right 2 digits.

## QUICK ADJUST

### WHILE PROGRAM KEYS 1 AND 5 ARE PRESSED

When pressing, and holding down, the PROG buttons (1 and 5) the display scrolls through:

3=Page Up 11=Page Down 8=Step Chase 4=Dim Up 12=Dim Down

Instructions



## PAGE CHANGE

Whilst still holding the PROG buttons down, the first press on buttons 3 or 11 will change the display to Current Page and Button.

Whilst still holding the PROG buttons down, further pressing of buttons 3 and 11 moves the display through the pages.

When the required page is shown in the display, release the PROG buttons (1 and 5).

Then press a button on that page for the Scene / Chase you require.

## STEP CHASE

Whilst still holding the PROG buttons down, pressing button 8 will display "STEP" and on releasing button 8 the running Chase's current STEP number OR "No.Chase" will be displayed.

## DIM UP AND DIM DN

Some products have a Master Dimmer channel. This function allows quick adjustment of this channel without affecting the programmed Scenes and Chases. Menu Option 10 (see below) is "10. Select Master Dimmer Channel", where the default channel is 10. At switch on the Master Dimmer is set to 100%

Whilst still holding the PROG buttons down, pressing button 4 or 12 will display the current Master Dimmer level. To decrease the level, press or hold down button 12. To increase the level, press or hold down button 4.

## DMX TERMINATION

The end of DMX lines longer than 50m must always be terminated with a 100Ω resistor connected between data+ and data-, this resistor can conveniently be mounted in a suitable XLR plug which should be inserted in the last unit on the DMX line(s).

5 pin DMX line terminating plugs are available from Pulsar, Product No. 21750.4

## INSTALLATION

**SURFACE MOUNTING** Four holes are provided in the tray base to allow the tray to be fixed to a surface. See fixing detail drawing. Remove the four M3.5 screws holding the front panel to the tray.

Carefully lift the front panel away and, if necessary, disconnect the provided control cable by pushing down on the levers of the terminal block. Carefully store the front panel.

Remove the required number of M4 blanking plugs located in the tray, offer the tray up to the surface and mark the positions of the fixings on the surface.

Once suitable holes have been drilled in the surface, screw the tray to the surface; if the cable had been disconnected, reconnect the cable to the lever operated terminal block and fix the front panel to the tray using the M3.5 screws.

**FLUSH MOUNTING** The OS1 may be mounted in a wall by using the supplied tray (box) or a 4 way UK electrical box. The four M3.5 screws holding the front panel to the tray are in the standard position for fitting faceplates to such boxes. Please see fixing detail drawing. Having fitted the box into the wall and run the appropriate insulated cable (4 core minimum) to the box; remove the four M3.5 screws on the front of the OS1.

Carefully lift the front panel away and disconnect the provided control cable by pushing down on the levers of the terminal block.

Connect your control cable to the lever operated terminal block (observing the functions of each terminal) and fix the OS1 front panel to the electrical box using the M3.5 screws.

## OTHER INFORMATION

**STANDARDS** - The OS1 complies with the following International and National Standards:

**Electrical Safety** - IEC65, EN60065, BS415

**EMC** - EN50081-1, EN55022, EN50082-1

**Index of Protection** - IP20

**CE Marking Directive 93/68/EEC** - The OS1 meets the EMC Directive 89/336/EEC.

This is a low voltage unit operating on +12...25VDC without a direct connection to the mains supply; it is therefore inherently safe as it operates on less than 75VDC as specified in the Low Voltage Directive 73/23/EEC.

**GUARANTEE** Your OS1 is guaranteed for a period of 12 months from the date of original purchase. The guarantee is limited to parts and labour. The guarantee is void if the unit is misused or unauthorised persons perform repairs. In the unlikely event of a fault occurring in the OS1 do not use without repair. Return the unit, with a description of the fault, to your supplier or direct to Pulsar for immediate attention.

## ACCESSORIES

The Pulsar OS1 has been designed to work with and complement the following products. Please contact us to receive further details of these superb products!

### ChromaRange

#### Product No. Controller

24550NC	ChromaZone	6 Way Controller for ChromaRange
24500	ChromaZone	12 Way Controller for ChromaRange
24500RM	ChromaZone	12 Way 19" Controller for ChromaRange
24500RMX3	ChromaZone	12 Way 19" Controller for ChromaRange
CBANK2	ChromaBank	Mk2
CBANKIP	ChromaBank	IP65 100/200/300W Luminaires
CBAT	ChromaBatten	IP65 17/50/100/200/300W Luminaires
CFLD	ChromaFlood	IP65 100/200W Luminaires

### Multi Control – DMX & PMX

#### Product No. Controller

21850	OS1 to Masterpiece RS232 Remote Control Cable
24000	Masterpiece 108 Control Desk
20216	Masterpiece 216 Control Desk
27216	Masterpiece Replay Unit 216

### Signal Processing

#### Product No. Interface

27770	6 Channel PMX/DMX – 0-10V Interface	
27350	18 Channel Universal Interface	DMX – 18x10V
27300	36 Channel Universal Interface	DMX – 36x10V
27400	18 Channel Switching Interface	DMX – 18x10V

### Rackpaks and Datapaks


A large range of dimming, and switching, packs for control of up to 20A per channel. Wall, Rack Mounting and Free Standing versions.

### Cables

#### Product No. Cable

21850	OS1 to Masterpiece RS232 Remote Control Cable
21750.4	DMX Line Terminator Plug (XLR-5)
21755.1	2m DMX Ext. Lead - 5 core (1 XLR-5 Plug, 1 Skt)
21755.2	5m DMX Ext. Lead - 5 core (1 XLR-5 Plug, 1 Skt)
21755.3	10m DMX Ext. Lead - 5 core (1 XLR-5 Plug, 1 Skt)

### OUTSTATION OS1 FIXING DETAILS

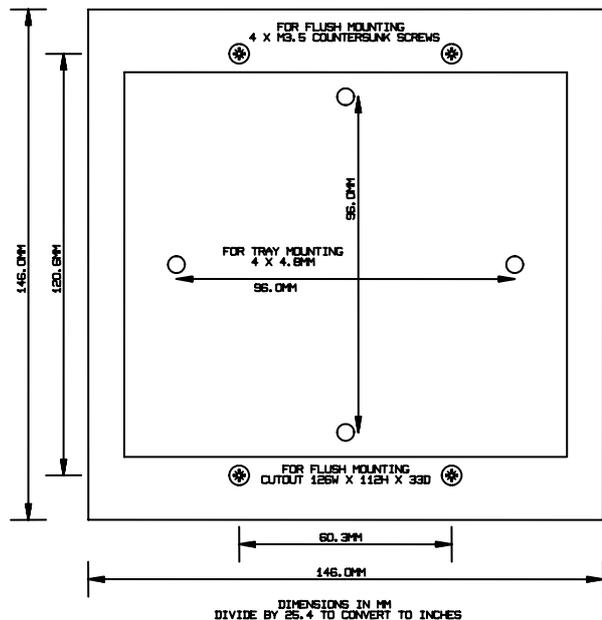

## DIMENSIONS AND WEIGHTS

Code	Unit	Width	Height	Depth	Weight
		mm	mm	mm	kg
OS1	Outstation OS1 Control Desk	146	146	38	2.1

# OUTSTATION OS1

FOR SOFTWARE  
VERSION No.2.0

## PROGRAMMING

To enter Program Mode, press buttons 1 and 5 together and release.

### SECURITY CODE

To prevent unauthorised or accidental access the OS1 requires a code to be entered when the PROG buttons (1 and 5) are simultaneously pressed and released.

The display will blink the word "CODE" indicating the code required for programming should now be entered. This code is 12, 6, 7, 1.


As the code is entered, the letters of the word CODE are replaced by the - character.

The word "PASS" is displayed to indicate the correct code was entered.

The word "FAIL" is displayed if the wrong code was entered.

If a button is not pressed within 5 seconds, the program mode is cancelled and the word "CNCL" is displayed.

The display now scrolls through the functions of the programming buttons:

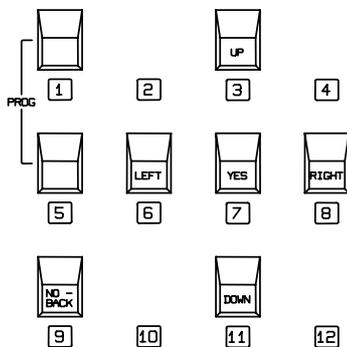

3 = UP, 11 = DOWN, 6 = LEFT, 8 = RIGHT, 7 = YES, 9 = NO - BAC

Pressing Up or Down cycles through the main menu programming options

- 1 = Set Channel Levels
- 2 = Save Scene
- 3 = Name Button
- 4 = Page Limit
- 5 = Crossfade Time Select
- 6 = Snap - Fade - Hold Table Set Up
- 7 = Chase Prog-View-Edit Steps and Times
- 8 = Masterpiece Outstation Mode
- 9 = Copy Button to Button
- 10 = Select Master Dimmer Channel
- 11 = Restore Factory Settings
- 12 = Clear Live Memory
- 13 = Backup Menu

To select one of these press YES, to go back press BAC

### 1. Set Channel Levels

- 1 = Set Channel Levels 1 by 1
- 2 = All Channel Levels to same level

Tip: Use Option 2 to set the majority of channels, and then use option 1 to set the exceptions.

Option 1: Use Left / Right to select channel, Up / Down to set level. Display alternates between channel number and level percentage.

Option 2: Use Up / Down to set level. Display shows level percentage. The Up / Down and Left / Right buttons repeat if held pressed.

To accept press YES, to restore and go back press BAC

### 2. Save Scene

Select the button you require using the Up / Down buttons. Pressing and holding an Up / Down button scrolls the display through the 5 Pages of 12 Scenes.

Display shows Page No. on the left and Button No. on the right.

Select the required destination Page and Button using the Up / Down buttons

To confirm press YES, to go back press BAC

### 3. Name Button

Select the button you require using the Up / Down buttons. Pressing and holding an Up / Down button scrolls the display through the 6 Pages of 12 Buttons.

To select press YES, to restore and go back press BAC

The active character flashes, press the Up / Down buttons to cycle through the available characters. The Up / Down buttons repeat if held pressed. Move on to the next / previous character or decimal point using the Right / Left buttons.

To accept press YES, to restore and go back press BAC

### 4. Page Limit

Useful for restricting user access when not all Pages are required.

The display shows 1 to 4, with a decimal point flashing to the right of the currently selected Page. Pressing the Left / Right buttons moves the decimal point to the next Page.

Press the Up / Down buttons to enable or restrict a Page.

The Page number flashes when restricted and remains static when accessible.

The display scrolls to Pages 5 and 6 after Page 4.

To accept press YES, to restore and go back press BAC

### 5. Crossfade Time Select

Press Yes to view the existing time (in seconds).

Select the crossfade time you require using the Up / Down buttons, available times are 0.0, 0.5, 1, 2, 3, 5, 10, 20, 30 and 60 seconds

To accept press YES, to restore and go back press BAC

### 6. Snap-Fade-Hold Table Set Up

Pressing Up/Down will cycle through the sub-menu options

- 1 = Set Snap - Fade - Hold 1 by 1
- 2 = Snap all Channels
- 3 = Fade all Channels
- 4 = Hold all Channels

Tip: Use 2 to 4 to set the majority of channels, and then use option 1 to set the exceptions.

Option 1: Press Left / Right to select the Channel to be modified, then press Up / Down to select the required Snap, Fade or Hold function. The Left / Right buttons repeat if held pressed.

To accept press YES, to restore and go back press BAC

### 7. Chase Prog-View-Edit Steps and Times

Up to 12 Chases of Scenes can be created from any of the 60 Scenes, 1.1 to 5.12 (5 Pages of 12). You may have up to 30 Steps per Chase, with each Step having its own Time duration.

Press the Up / Down buttons to select one of the 12 Chases on Page 6

To accept press YES, to go back press BAC

1 = Set Times 1 by 1

2 = Set all Times the same

Tip: Use 2 to set the majority of Times, and then use option 1 to set the exceptions.

To accept press YES, to restore and go back press BAC

The display shows the Scene Page (1-5) in the left digit and the Scene number in the right digit(s) for Step 1 or the two other (Step) functions STOP and LOOP.

Pressing and holding down the Right/Left button displays St. in the left two digits and the Step number in the right digit(s)

Releasing the Right/Left button displays the Page number in the left digit and the Scene number in the right digit(s).

Another press and hold of the Right/Left button displays Ti (Time) in the left two digits and the Time number in the right digit(s)

Releasing the Right/Left button displays the step's duration.

To Program/View/Modify a Chase Step, toggle the Right/Left buttons until St. n (where n=STEP number) appears with the button held down. Releasing the button displays the current Page and Scene number associated with that Step. To change the Page and Scene number, press the Up / Down buttons until the required Page and Scene number are shown in the display.

The functions STOP and LOOP are available following Scene 5.12 (upwards) or 1.1 (downwards).

STOP is for a "one shot" chase, the chase runs once and stops on the scene preceding the "STOP" step.

Instructions



LOOP returns to step one. For example, a 6 Step LOOPing chase would have LOOP in Step 7

To Program/View/Modify a Chase step TIME, toggle the Left/Right buttons until Tl. n (where n=TIME number) appears with the button held down. Releasing the button displays the duration associated with that STEP. To change the TIME, press the Up / Down buttons until the required TIME is shown in the display.

The TIME display takes the format:

0.00.1 - 0.00.9	0.1 to 0.9 seconds
0.01.0 - 0.09.0	1 to 9 seconds
00.10 - 00.50	10 to 50 seconds
1.00 - 50.00	1 to 50 minutes
1.00H - 9.00H	1 to 9 hours
10Hr - 24Hr	10 to 24 hours

Fine TIME adjustment may be achieved by programming more STEPS with the same PAGE and SCENE number using TIME values to add up to the TIME you require.

Repeat the Program/View/Modify Chase Step and Chase Step TIME instructions above until your Chase is complete, then put a STOP or LOOP in the next Step

*To accept press YES, to restore and go back press BAC*

### 8. Masterpiece Outstation Mode

Pressing Up/Down will cycle through the programming options

1 = OFF

2 = ON

3 = Set Button Functions

Option 1: The OS1 will transmit DMX512 in normal mode

Option 2: The OS1 will transmit PMX (RS232) to the Remote Control socket on the Masterpiece.

Option 3: Press Left / Right to scroll through buttons 1-12 for each of the 6 pages. Display shows Page No. on left and Button No. on right. Once the required Page and destination Button is shown in the display, select the Function you require (as listed in the *Pulsar Masterpiece - Appendix 2 - Remote Control by PMX (RS232)*) by pressing the Up / Down buttons

The Left / Right and Up / Down buttons repeat if held pressed.

*To accept press YES, to go back press BAC*

### 9. Copy Button to Button

The Up / Down buttons repeat if held pressed.

Press the Up / Down buttons to select the button to copy "From"

*To accept press YES, to go back press BAC*

Press the Up / Down buttons to select the button to copy "To"

*To accept press YES, to go back press BAC*

If you wish to Copy the same "From" information to another button, press the Up / Down buttons to select the next button to copy "To"

*To accept press YES, to go back press BAC*

*Either select another button to copy "From" or press BAC*

### 10. Select Master Dimmer Channel

The Left / Right buttons repeat if held pressed.

The current Master Dimmer Channel is displayed, the default is Channel 10

Press the Left / Right buttons to change the Master Dimmer Channel

*To accept press YES, to go back press BAC*

### 11. Restore Factory Defaults



**WARNING** – this will override ALL user programming.

The Factory Default Settings are shown on the page entitled *Pre-Programmed (Chroma) Scene Pages*.

This function loads the default settings to the LIVE memory area and clears the BACKUP memory area.

Selecting this function will display "Are you sure"

*To accept press YES, to go back press BAC*

### 12. Clear Live Memory



**WARNING** – this will clear user programming.

The Live memory area may be cleared out ready for a new set of Scenes and Chases rather than modifying the existing set. Scenes and Chases are cleared independently.

Press the Up / Down buttons to select Scenes or Chases

1 = Scenes – Clear Scenes

2 = Chases – Clear Chases

*To accept press YES, to go back press BAC*

Selecting this function will display "Are you sure"

*To accept press YES, to go back press BAC*

### 13. Backup Menu



**WARNING** – this could override user programming.

This function provides a means of storing your programmed Scenes and Chases to a Backup area of memory, swapping Scenes and Chases between the backup and Live memory areas, and retrieving your stored Scenes and Chases from the Backup memory area.

Press the Up / Down buttons to select the backup function

1. = Copy Live to Backup

2. = Swap Live and Backup

3. = Copy Backup to Live

*To accept press YES, to go back press BAC*

Selecting this function will display "Are you sure"

*To accept press YES, to go back press BAC*

### Modifying Scenes

Press the Button to select the Scene to be modified.

Follow the **Programming Sections – Set Channel Levels and Save Scene**, to save the modified Scene to the same Page and destination Button, or a new one.

# Outstation OS1 - Default (Chroma) Channel Assignments and Snap/Fade/Hold Table

Channel No.	Function	Crossfade Type Snap/Fade/Hold [ / ]	Channel No.	Function	Crossfade Type Snap/Fade/Hold [ / ]
1	All Red	Snap	31	Output 7 Blue	Fade
2	All Green	Snap	32	Output 8 Red	Fade
3	All Blue	Snap	33	Output 8 Green	Fade
4	Chase 1 Select	Snap	34	Output 8 Blue	Fade
5	Chase 1 Speed	Snap	35	Output 9 Red	Fade
6	Chase 1 Level	Fade	36	Output 9 Green	Fade
7	Chase 2 Select	Snap	37	Output 9 Blue	Fade
8	Chase 2 Speed	Snap	38	Output 10 Red	Fade
9	Chase 2 Level	Fade	39	Output 10 Green	Fade
10	Grand Master for 11-46	Fade	40	Output 10 Blue	Fade
11	Output 1 Red	Fade	41	Output 11 Red	Fade
12	Output 1 Green	Fade	42	Output 11 Green	Fade
13	Output 1 Blue	Fade	43	Output 11 Blue	Fade
14	Output 2 Red	Fade	44	Output 12 Red	Fade
15	Output 2 Green	Fade	45	Output 12 Green	Fade
16	Output 2 Blue	Fade	46	Output 12 Blue	Fade
17	Output 3 Red	Fade	47		Fade
18	Output 3 Green	Fade	48		Fade
19	Output 3 Blue	Fade	49		Fade
20	Output 4 Red	Fade	50		Fade
21	Output 4 Green	Fade	51		Fade
22	Output 4 Blue	Fade	52		Fade
23	Output 5 Red	Fade	53		Fade
24	Output 5 Green	Fade	54		Fade
25	Output 5 Blue	Fade	55		Fade
26	Output 6 Red	Fade	56		Fade
27	Output 6 Green	Fade	57		Fade
28	Output 6 Blue	Fade	58		Fade
29	Output 7 Red	Fade	59		Fade
30	Output 7 Green	Fade	60		Fade

Instructions



# Outstation OS1 - User Programmed Channel Assignments and Snap/Fade/Hold Table

Channel No.	Function	Crossfade Type Snap/Fade/Hold 「 / 」	Channel No.	Function	Crossfade Type Snap/Fade/Hold 「 / 」
1			31		
2			32		
3			33		
4			34		
5			35		
6			36		
7			37		
8			38		
9			39		
10			40		
11			41		
12			42		
13			43		
14			44		
15			45		
16			46		
17			47		
18			48		
19			49		
20			50		
21			51		
22			52		
23			53		
24			54		
25			55		
26			56		
27			57		
28			58		
29			59		
30			60		

INSTRUCTIONS

Please copy this page for future programming



# Outstation OS1

## Pre-Programmed (Chroma) Scene and Chase Pages

Pressing any button reveals the name of the scene on that button (as shown in the **Display** column of the tables). Releasing the button activates that scene and shows fade time in seconds in the left 2 digits and button number in the right 2 digits.

When the crossfade time has counted down, the display reverts to showing the current page number in the left digit and button number in the right 2 digits.

Pages 1 and 2 are pre-programmed with dynamic effects, Pages 3-5 are pre-programmed with static effects.

**PAGE 1** Uses the built in effects on Channels 1-9 of a ChromaZone/Bank.  
The ChromaZone/Bank may therefore be in 9 or 46 Channel Mode

Display	Scene	Display	Scene	Display	Scene	Display	Scene
1 OFF	Off	2 6.COL	6 Crossfading Colours	3 bL.nR	Blue Nightrider	4 18.nR	18 xfading col Nightrider
5 G-M	Green - Magenta Wave	6 18.CO	18 Crossfading Colours	7 WIPE	Colour Wipes	8 CASC	Cascade + auto colour
9 FOL3	18 Contrasting Colours	10 rAIn	Rainbow Crossfade	11 rANd	Random Colours	12 AUtO	Auto Chase

**PAGE 2** Uses the built in effects on Channels 1-9 of a ChromaZone/Bank.  
The ChromaZone/Bank may therefore be in 9 or 46 Channel Mode  
This is a slower, gentler version of Page 1 with some direction and colour variations.

Display	Scene	Display	Scene	Display	Scene	Display	Scene
1 OFF	Off	2 6.COL	6 Crossfading Colours	3 bL.nR	Blue Nightrider	4 18.nR	18 xfading col Nightrider
5 rd.Cn	Red - Cyan Wave	6 18.CO	18 Crossfading Colours	7 WIPE	Colour Wipes	8 CASC	Cascade + auto colour
9 FOL3	18 Contrasting Colours	10 rAIn	Rainbow Crossfade	11 rANd	Random Colours	12 AUtO	Auto Chase

**PAGE 3** These scenes drive the individual RGBs on Channels 10 to 46  
The ChromaZone/Bank must therefore be in 46 Channel Mode

Display	Scene	Display	Scene	Display	Scene	Display	Scene
1 rd.Cn	Red - Cyan	2 Cn.rd.	Cyan - Red	3 Or.PC	Orange - Peacock	4 PC.Or	Peacock - Orange
5 YE.bL	Yellow - Blue	6 bL.YE	Blue - Yellow	7 LI.PU	Lime - Purple	8 PU.LI	Purple - Lime
9 Gr.m	Green - Magenta	10 M.Gr	Magenta - Green	11 SE.rO	Sea - Rose	12 rO.SE	Rose - Sea

**PAGE 4** These scenes drive the individual RGBs on Channels 10 to 46  
The ChromaZone/Bank must therefore be in 46 Channel Mode

Display	Scene	Display	Scene	Display	Scene	Display	Scene
1 rEd	Red	2 OrNG	Orange	3 yELO	Yellow	4 LIm	Lime
5 GrEN	Green	6 SEA	Sea	7 CyAN	Cyan	8 PCOC	Peacock
9 bLUE	Blue	10 PURP	Purple	11 mAG	Magenta	12 rOSE	Rose

**PAGE 5** These scenes drive the individual RGBs, on Channels 10 to 46  
The ChromaZone/Bank must therefore be in 46 Channel Mode

Display	Scene	Display	Scene	Display	Scene	Display	Scene
1 L.rEd	Light Red	2 L.yEL	Light Orange	3 L.GrN	Light Green	4 L.cYn	Light Cyan
5 L.bLU	Light Blue	6 L.mG	Light Magenta	7 Lr.LC	Light Red - Light Cyan	8 Ly.Lb	Light Yellow - Light Blue
9 rAIn	Rainbow - forward	10 nIAR	Rainbow - reverse	11 Rb.bR	2 Rnbw-C1&2-Opp.Dir.	12 Rb.Rb	2 Rainbow-Chase1 & 2

**PAGE 6** Various demonstration chases using the Scenes in Pages 1 – 5 are programmed onto these buttons

Display	Chase	Display	Chase	Display	Chase	Display	Chase
1 C. 1		2 C. 2		3 C. 3		4 C. 4	
5 C. 4		6 C. 6		7 C. 7		8 C. 8	
9 C. 9		10 C. 10		11 C. 11		12 C. 12	

Instructions



# Outstation OS1

## User Programmed Scene Pages

### PAGE 1

Display	Scene	Display	Scene	Display	Scene	Display	Scene
1		2		3		4	
5		6		7		8	
9		10		11		12	

Notes:

### PAGE 2

Display	Scene	Display	Scene	Display	Scene	Display	Scene
1		2		3		4	
5		6		7		8	
9		10		11		12	

Notes:

### PAGE 3

Display	Scene	Display	Scene	Display	Scene	Display	Scene
1		2		3		4	
5		6		7		8	
9		10		11		12	

Notes:

### PAGE 4

Display	Scene	Display	Scene	Display	Scene	Display	Scene
1		2		3		4	
5		6		7		8	
9		10		11		12	

Notes:

### PAGE 5

Display	Scene	Display	Scene	Display	Scene	Display	Scene
1		2		3		4	
5		6		7		8	
9		10		11		12	

Notes:

### PAGE 6

Display	Chase	Display	Chase	Display	Chase	Display	Chase
1		2		3		4	
5		6		7		8	
9		10		11		12	

Notes:

INSTRUCTIONS

Please copy this page for future programming



# Outstation OS1

## Remote Control of Masterpiece By PMX/RS232

A three pin XLR plug and socket are provided on the back panel of the Masterpiece for RS232 "IN" and "THRU". This input allows you to press a number of front panel keys remotely from the OS1, a computer serial port or other source of RS232. Thus you can do anything from putting on a single lighting channel to triggering a complete lightshow remotely. The system is implemented from Masterpiece software version N.1.82 and Outstation OS1 software version No.1.5. The complete list of available Masterpiece functions (in the order in which they appear) can be found in Appendix 2

Pressing any button reveals the name of the Masterpiece function on that button (as shown in the *Default (factory set)* column of the tables).

Releasing the button activates that function and shows page number in the left digit and button number in the right 2 digits.

Please use the User column to record your programmed button assignments. You may like to copy this page for future programming.

### PAGE 1

Button	Default	User									
1 1	E.1.-1		1 2	E.1.-2		1 3	E.1.-3		1 4	E.1.-4	
1 5	E.2.-1		1 6	E.2.-2		1 7	E.2.-3		1 8	E.2.-4	
1 9	E.3.-7		1 10	E.3.-8		1 11	E.3.-9		1 12	E.C.-1	

Notes:

### PAGE 2

Button	Default	User									
2 1	E.1.-5		2 2	E.1.-6		2 3	E.1.-7		2 4	E.1.-8	
2 5	E.2.-5		2 6	E.2.-6		2 7	E.2.-7		2 8	E.2.-8	
2 9	E.3.10		2 10	E.3.11		2 11	E.3.12		2 12	E.C.-2	

Notes:

### PAGE 3

Button	Default	User									
3 1	E.1.-9		3 2	E.1.10		3 3	E.1.11		3 4	E.1.12	
3 5	E.2.-9		3 6	E.2.10		3 7	E.2.11		3 8	E.2.12	
3 9	E.3.13		3 10	E.3.14		3 11	E.3.15		3 12	E.C.-3	

Notes:

### PAGE 4

Button	Default	User									
4 1	E.1.13		4 2	E.1.14		4 3	E.1.15		4 4	E.1.16	
4 5	E.2.13		4 6	E.2.14		4 7	E.2.15		4 8	E.2.16	
4 9	E.3.16		4 10	E.3.17		4 11	E.3.18		4 12	E.C.-4	

Notes:

### PAGE 5

Button	Default	User									
5 1	E.1.17		5 2	E.1.18		5 3	E.2.17		5 4	E.2.18	
5 5	10.-1		5 6	10.-2		5 7	11.-1		5 8	11.-2	
5 9	C.3.-1		5 10	C.3.-2		5 11	E.C.-5		5 12	E.C.-6	


Notes:

### PAGE 6

Button	Default	User									
6 1	S10.-3		6 2	S10.-4		6 3	S10.-5		6 4	S10.-6	
6 5	S11.-3		6 6	S11.-4		6 7	S11.-5		6 8	S11.-6	
6 9	C3.-3		6 10	C3.-4		6 11	C3.-5		6 12	C3.-6	

Notes:

An additional cable, Pulsar Stock No.21850 is required to connect the OS1 to the Masterpiece. The cable circuit diagram is:

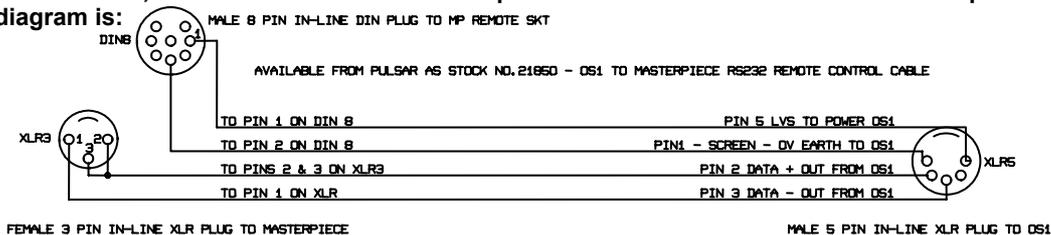

DIN SOCKET POWERS OS1. XLR3 CARRIES PMX (RS232) DATA TO REMOTELY CONTROL THE MASTERPIECE

Please copy this page for future programming



Instructions

**PULSAR MASTERPIECE - APPENDIX TWO - REMOTE CONTROL BY PMX (RS232 )**

A three pin XLR plug and socket are provided on the back panel for RS232 "IN" and "THRU". This input allows you to press a number of front panel keys remotely from a Pulsar OS1 OutStation, computer serial port, etc.. Thus you can do anything from putting on a single lighting channel to triggering a complete lightshow remotely. The system is implemented from software version N.1.82. It is similar to Remote Control by MIDI - see Appendix Three.

<u>Press No.</u>	<u>Function</u>	<u>Press No.</u>	<u>Function</u>	<u>Press No.</u>	<u>Function</u>	<u>Press No.</u>	<u>Function</u>
0	00H S10.-1	36	24H E1.-1	72	48H EC.-1	99	63H C3.-1
1	01H S10.-2	37	25H E1.-2	73	49H EC.-2	100	64H C3.-2
2	02H S10.-3	38	26H E1.-3	74	4AH EC.-3	101	65H C3.-3
3	03H S10.-4	39	27H E1.-4	75	4BH EC.-4	102	66H C3.-4
4	04H S10.-5	40	28H E1.-5	76	4CH EC.-5	103	67H C3.-5
5	05H S10.-6	41	29H E1.-6	77	4DH EC.-6	104	68H C3.-6
6	06H S10.-7	42	2AH E1.-7	78	4EH E3.-7	105	69H C3.-7
7	07H S10.-8	43	2BH E1.-8	79	4FH E3.-8	106	6AH C3.-8
8	08H S10.-9	44	2CH E1.-9	80	50H E3.-9	107	6BH C3.-9
9	09H S10.10	45	2DH E1.10	81	51H E3.10	108	6CH C3.10
10	0AH S10.11	46	2EH E1.11	82	52H E3.11	109	6DH C3.11
11	0BH S10.12	47	2FH E1.12	83	53H E3.12	110	6EH C3.12
12	0CH S10.13	48	30H E1.13	84	54H E3.13	111	6FH C3.13
13	0DH S10.14	49	31H E1.14	85	55H E3.14	112	70H C3.14
14	0EH S10.15	50	32H E1.15	86	56H E3.15	113	71H C3.15
15	0FH S10.16	51	33H E1.16	87	57H E3.16	114	72H C3.16
16	10H S10.17	52	34H E1.17	88	58H E3.17	115	73H C3.17
17	11H S10.18	53	35H E1.18	89	59H E3.18	116	74H C3.18
18	12H S11.-1	54	36H E2.-1	90	5AH Fwd Man Step	117	75H Sho.1
19	13H S11.-2	55	37H E2.-2	91	5BH Rev Man Step	118	76H Sho.2
20	14H S11.-3	56	38H E2.-3	92	5CH	119	77H Sho.3
21	15H S11.-4	57	39H E2.-4	93	5DH	120	78H Sho.4
22	16H S11.-5	58	3AH E2.-5	94	5EH	121	79H Sho.5
23	17H S11.-6	59	3BH E2.-6	95	5FH	122	7AH Sho.6
24	18H S11.-7	60	3CH E2.-7	96	60H Swap Card-Mem	123	7BH Sho.7
25	19H S11.-8	61	3DH E2.-8	97	61H Card to Mem	124	7CH Sho.8
26	1AH S11.-9	62	3EH E2.-9	98	62H Remote Blackout	125	7DH
27	1BH S11.10	63	3FH E2.10			126	7EH
28	1CH S11.11	64	40H E2.11		Swap Card-Mem and	127	7FH All Off
29	1DH S11.12	65	41H E2.12		Card to Mem are		
30	1EH S11.13	66	42H E2.13		not available in		Sho.1 – Sho.8 are
31	1FH S11.14	67	43H E2.14		MP216 or RU216		Show Change for
32	20H S11.15	68	44H E2.15				MP216 and RU216 only
33	21H S11.16	69	45H E2.16				
34	22H S11.17	70	46H E2.17				
35	23H S11.18	71	47H E2.18				

**Notes:**

E.G. E.2.-7 = Environment Keyboard No.2, Keyboard Key No.7.

The Keyboards driven by the PMX signal may be in Flash, Swap or Solo, but Latch, which toggles with each press, should be used with caution as it is possible to lose track of whether a key is off or on.

**The PMX (PulsarMultipleX) RS232 TRANSMISSION PROTOCOL required is:**

**SERIAL FORMAT** - 9600 baud, 1 start bit, 8 data bits, 1 stop bit, no parity.

**HANDSHAKING** - not required - so RTS (Pin 4 on a 25 pin 'D' connector) and CTS (Pin 5) need to be cross linked at the computer to allow it to transmit.

**DATA STRUCTURE** - Three bytes are required per key Press/Unpress:

- 1) A Header Byte with the value 252 (FCH) to show that key press information follows,
- 2) A Press Number byte with a value 0-127 (00-7FH) to select a key - see table above,
- 3) And finally a data byte, which, with a value in the range 64-127 (40-7FH) = Key Pressed, or with a value in the range 0-63 (00-3FH) = Key Unpressed. A Keyboard in Latch mode toggles for each Press, Unpress information having no effect. A Keyboard in Flash mode is turned On by a Press and Off by an Unpress.

**PULSAR LIGHT OF CAMBRIDGE LTD.**

**3 COLDHAMS BUSINESS PARK, NORMAN WAY, CAMBRIDGE, CB1 3LH, UK.**

**TEL: +44 (0)1223 403500, FAX: +44 (0)1223 403501, [www.pulsarlight.com](http://www.pulsarlight.com)**

**P.F.M. 29-09-04**

# ChromaZone™ Software Version 3.1

**Pulsar ChromaZone / ChromaBank Software Version No. 3.1** (MAIN micro 3.1 29-11-04 + DMX micro 3.0 26-02-04) has many exciting new features. The additions since version 1.2 are: • Two built in Chases – allowing superimposition of effects and crossfading between chases. Chase 1 and 2 use the same table of 31 chases but there are differences to give you more choice - Chase 1 uses the Master Red, Green and Blue Channels 1, 2 & 3 to change the colour of some chases (see table) while Chase 2 stays white and uses them to give a background colour. • There are chase enhancements - shown in **Bold Italic** below. • The chases now have smoother waveforms. • There are 4 new operating modes: 9 Channel, 10 Channel (from 3.1), 36 Channel and 46 Channel Modes, in addition to the original 6 and 42 Channel Modes. • There's a Master Dimmer Channel (Ch.10) for the 36 individual RGB channels and, with option 7 up, this becomes a **Global Grand Master** for the All R/G/B and Chases Levels too (from 3.1). • A new Dimmer Law doubles the bottom end resolution for smoother dimming and increases the top end action. • Input Smoothing Disable Switch for fast display of video graphics, **and video frame rate capability** (from 3.0). • Plus a new, more useful choice of Stand Alone Chase Speeds. • Please see the lid printing pages for details of the Operating Modes and how to select them, Channel Listings, and further information. • Version 3.1 is suitable for both the ChromaZone 12 and the ChromaZone 6.

DIL Switch	Chase	Ch.4&7	Bit	Chase	Notes
4 5 6 7	No.	Input	No.	Description	
■ ■ ■ ■	15	100%	255	Auto Chase	
		95%	242	Green Yellow Red Bar Graph Rev	Use Ch.1
		92%	235	Green Yellow Red Bar Graph Fwd	Use Ch.1
■ ■ ■ ■	14	90%	230	Rainbow Strobe	
■ ■ ■ ■	13	85%	217	White / Any Colour Strobe	Chs.1, 2, & 3 set colour
		82%	209	White / <b>Any Colour</b> Crossover	<b>New: Chs. 1, 2 &amp; 3 set colour</b>
■ ■ ■ ■	12	80%	204	Blue-Yellow Wave Rev	
		77%	196	Blue-Yellow Wave Fwd	
		73%	186	Green-Magenta Wave Rev	
■ ■ ■ ■	11	70%	179	Green-Magenta Wave Fwd	
		67%	171	Red-Cyan / <b>AnyCol/Op.Col</b> Wave Fwd	<b>New: Chs. 1, 2 &amp; 3 set colour</b>
■ ■ ■ ■	10	65%	166	Red-Cyan / <b>AnyCol/Op.Col</b> Wave Rev	All 3 at 0% = Red-Cyan
■ ■ ■ ■	9	60%	153	Black-White/ <b>AnyColour</b> Wave Fwd	<b>New: Chs. 1, 2 &amp; 3 set colour</b>
		57%	145	Black-White/ <b>AnyColour</b> Wave Rev	All 3 at 0% = White.
■ ■ ■ ■	8	55%	140	Random Cols <b>Chs1 Xfade, Chs2 Snap</b>	<b>New in 3.1: Chase1 Xfades</b>
		52%	133	Rainbow 2 Crossfade Fwd	Wider primary colours to compensate for extra diffusion
		48%	122	Rainbow 2 Crossfade Rev	
■ ■ ■ ■	7	45%	115	Rainbow Crossfade Fwd	Equal width primary & secondary colours
■ ■ ■ ■	6	41%	105	Rainbow Crossfade Rev	
		38%	97	"Follow 3" 18 Contrasting Cols Rev	
■ ■ ■ ■	5	35%	89	"Follow 3" 18 Contrasting Cols Fwd	
		32%	82	18 Crossfading Colours Rev	
■ ■ ■ ■	4	30%	77	18 Crossfading Colours Fwd	
		27%	69	White/AnyColour/ <b>AutoColour</b> Cascade Rev	Chs. 1, 2 & 3 set colour. All 3 at 0% = White. <b>New: All 3 at 100% = Auto Colour Change</b>
		23%	59	White/AnyColour/ <b>AutoColour</b> Cascade Fwd	
■ ■ ■ ■	3	20%	51	6 Crossfading Pastel Colours	
		17%	43	Colour Wipes	
■ ■ ■ ■	2	15%	38	6 Crossfading Colours	
■ ■ ■ ■	1	10%	26	6 Separate Colours	
		7%	18	Red Green Blue Bar Graphs Rev	Use Chs. 1, 2 & 3
		5%	13	Red Green Blue Bar Graphs Fwd	Use Chs. 1, 2 & 3
■ ■ ■ ■	0	0%	0	No Chase	

Instructions