



# MSR Gold™ FastFit

## MSR Gold™ 2000/1 FastFit

All lamps burn out eventually, but when this happens with single ended MSR Gold™ FastFit, it is replaced in seconds – thanks to the specially designed lamp base and lamp holder. This lamp provides a high beam intensity of pure, white light for a truly illuminating performance, while the gold-plated caps provide superior heat protection and prevent premature failure. P3 technology allows use in any position and at higher temperatures, further extending lamp life and consistency of high-quality light output. Also, because the FastFit design is applied to Philips Halogen lamps, switching between lamp technologies can be done quickly and easily. The Philips MSR Gold™ 1200 FastFit can be operated in a lamp wattage range between 800W and 1400W.

### Product data

General Information		Ignition Supply Voltage (Max)	
Cap-Base	PGJX50 [ PGJX50]		198 V
Operating Position	Universal [ Universal]	Controls and Dimming	
Main Application	Entertainment	Dimmable	Yes
Life to 50% Failures (Nom)	750 h	Mechanical and Housing	
Light Technical		Cap-Base Information	PGJX50
Initial lumen (Min)	155000 lm	Luminaire Design Requirements	
Initial lumen (Nom)	172000 lm	Bulb Temperature (Max)	950 °C
Chromaticity Coordinate X (Nom)	329	Pinch Temperature (Max)	500 °C
Chromaticity Coordinate Y (Nom)	333	Product Data	
Correlated Color Temperature (Nom)	5700 K	Order product name	MSR Gold™ 2000/1 FastFit 1CT/8
Luminous Efficacy (Rated) (Nom)	86 lm/W	EAN/UPC - Product	8718696679449
Color Rendering Index (Nom)	90	Order code	323709
Operating and Electrical		Numerator - Quantity Per Pack	1
Power (Rated) (Nom)	2000 W	Numerator - Packs per outer box	8
Lamp Current (Nom)	18.2 A		


## MSR Gold™ FastFit

Material Nr. (12NC)	928410105114
Net Weight (Piece)	138.000 g

### Warnings and Safety

- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.
- Lamp contains mercury. Manage in Accord with Disposal Laws. See: [www.lamprecycle.org](http://www.lamprecycle.org) or 1-800-555-0050

### Dimensional drawing

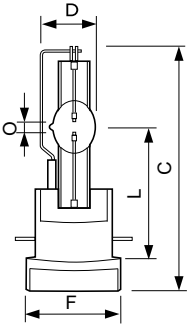

MSR Gold 2000/1 FastFit

Product	D (max)	O	L (min)	L	L	C (max)	F
MSR Gold™ 2000/1 FastFit 1CT/8	34 mm	8 mm	66 mm	68 mm	67 mm	134 mm	50 mm



Distributor:

  
Techni-Lux  
[www.techni-lux.com](http://www.techni-lux.com)

Phone: 407-857-8770  
Fax: 407-857-8771  
Email: [sales@techni-lux.com](mailto:sales@techni-lux.com)