


# SHIVA

# SV-150/200/250™



*Unprecedented performance comes in this promising package -- the first die-cast aluminum scanner case made in Asia. SHIVA™ scan has the form to entice and the functions to captivate.*

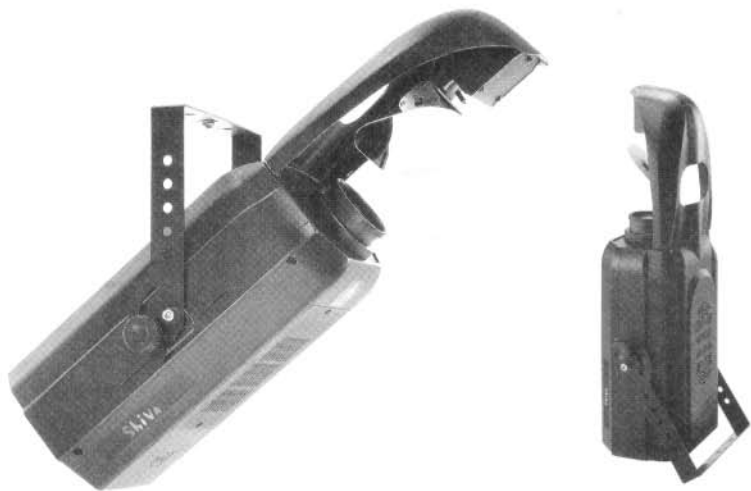

**CAUTION!**

Risk of electric shock  
Read instructions before installing  
or connecting to power

# CONGRATULATIONS!

**You are smart. You have one of the best scanners around.**

And with the Geni mark, you are ensured of high quality and reliability for years to come.

You can rely on Geni Electronics Co., Ltd., for more excellent lighting products. We design and manufacture strobes, effects, and scanners. And we work hard to keep you, our customer, satisfied.

You can get some of the best quality, best priced products on the market from Geni. You know that, because you're smart. Always get the best -- with Geni.

Main Office/Factory:  
Geni Electronics Co., Ltd.  
No. 22, Chung Cheng 5<sup>th</sup> Street  
Yung Kang Tainan Hsien, Taiwan



Tel: 886-6-253-8513  
Fax: 886-6-253-8685

Showroom:  
Geni Electronics Co., Ltd.  
Taipei World Trade Center, Room 3A-04  
No. 5, Section 5, Hsin Yi Road,  
Taipei, Taiwan

Tel: 886-2-2722-2910  
Fax: 886-2-2722-2918

**Get the best -- get Geni!**

Geni Quality Sets the Standard

Thank you!

# CONTENTS

## ABOUT SHIVA-150/200/250™ SCANNERS

Description .....	Page 1
Features .....	Page 1
Scanner Diagrams .....	Page 2
Warning .....	Page 3

## SECTION 1 - SETTING UP

Inspection .....	Page 3
Lamp Installation .....	Page 4
Scanner Installation .....	Page 5
Focusing the Lens .....	Page 5

## SECTION 2 - OPERATION

DMX512 Control .....	Page 6
Channel Control Positions .....	Page 6
Function Settings .....	Page 6
Service Dip Switches .....	Page 7
Maintenance .....	Page 8
Lamp Removal .....	Page 8
Trouble-shooting .....	Page 9
Product Specifications .....	Page 10

## APPENDIX 1

DMX Address Chart .....	Page 11
-------------------------	---------

## APPENDIX 2

DMX Channel Control Diagram .....	Page 12
-----------------------------------	---------

## APPENDIX 3

SHIVA-150/200/250™ Scanner Gobos .....	Page 13
--	---------

## APPENDIX 4

Gobo Dimensions .....	Page 14
-----------------------	---------

# ABOUT SHIVA-150/200/250™

## Description

Unprecedented performance comes in this promising package -- the first die-cast aluminum scanner case made in Asia. Shiva-150/200/250™ scanner has the form to entice and the functions to captivate.

Excellent optics provide high lumen output. Nine replaceable gobos, nine pure dichroic colors + white, and strobe provide variety for great light shows. Precision engineering and quality components make for smooth movement and exact X/Y placement. Shiva-150/200/250™ scanner is value-engineered to beat all competition.

And with every model, Geni's user-oriented design lets you work at your convenience. User aids, including focus assistance, self-test function, X/Y direction control, and color/gobo change transition options, enhance programming convenience and pleasure. Shiva-150/200/250™ is the scanner to win with.


## Features

- Die-cast aluminum case for beauty and strength
- Excellent optics for high lumen output:
  - Large optical path
  - AR & IR coated lenses
- Effect variety to make great shows:
  - Nine replaceable gobos
  - Nine dichroic colors + white
  - Strobe
- Engineered to perform:
  - 1-5 frequency-per-second (fps) strobe
  - 170° pan, 90° tilt
  - Smooth micro-stepping
- Built to last:
  - 4 precision, quality stepper motors
  - Axial fans with long-life ball bearings
- Convenient to use:
  - Focus, self-test, X/Y direction options, and more

## SHIVA™ Scanner Diagrams


### SHIVA™ Scanner

- A1 - Bracket**
- A2 - Stepper Motor**
- A3 - Mirror**
- A4 - Lens**
- A5 - Bracket Knob**
- A6 - Air Vents**

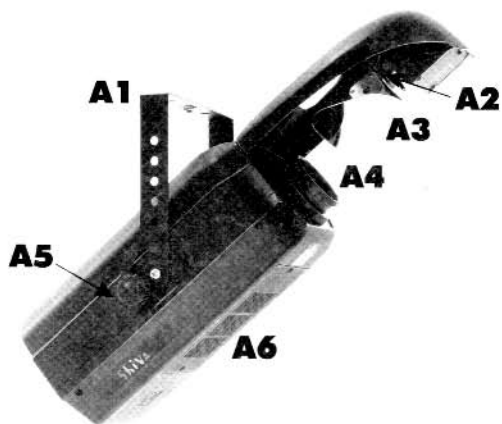

### SHIVA™ Scanner Back Panel

- B1 - Service Dip Switches**
- B2 - Slide-out Lamp Holder**
- B3 - Middle Screw**
- B4 - Fuse Holder**
- B5 - IEC Power Socket**
- B6 - Lamp Holder Screws**
- B7 - Function Dip Switches**
- B8 - Canon DMX Signal Socket (Signal Out)**
- B9 - DMX Dip Switches**
- B10 - Canon DMX Signal Socket (Signal In)**
- B11 - Earth Ground**

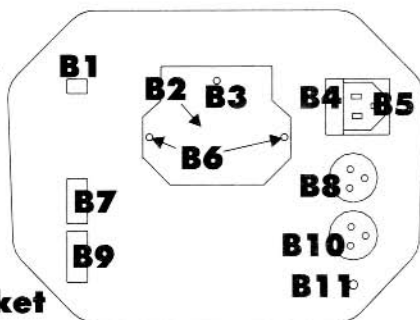



## **Warning!**

Follow standard precautions for all electronic products.

- This appliance must be earthed (grounded). Disconnect from power before removing covers or servicing. Keep case closed while operating.
- Shiva-150/200/250™ scanner contains no user serviceable parts. Refer servicing to qualified service technicians only.
- Lamp and components become hot during operation. Allow time to cool before handling.
- Keep flammable material at least one meter away from unit. Do not operate in wet conditions or near liquids.
- Keep air vents clear to avoid overheating. Never insert objects into air vents.
- Lamp produces hazardous UV light. Do not look directly at lamp when lit. Do not expose skin to uncovered lamp.
- If objects fall on unit, disconnect mains power supply immediately. Have a qualified technician inspect for safety before operating.
- Never remove warning or informative labels from the unit.

# **SECTION 1 - SETTING UP**

## **Inspection**

Every Shiva-150/200/250™ scanner was thoroughly tested and shipped in perfect condition. Carefully unpack your scanner and remove the bag with Components from the carton. Inspect equipment for shipping damage. Contact your Geni dealer immediately if damage has occurred or if something is missing.

Packing list:

- Shiva-150/200/250™ scanner
- IEC power cord
- Operating manual

**Note:** For the sake of brevity, this manual refers to "Shiva- 150/200/250™ " scanner. Actually, "Shiva-150/200/250™ " refers to the three scanners with similar functions: Shiva-200™ scanner uses HSD-200 lamp which has a 2000-hour lamp life. Shiva-250™ scanner uses EHJ 64655 G6.35 24V/250W (50-hour) or EHJ 64657 G6.35 24V/250W (300-hour) lamp. Shiva-150™ uses PHILIPS CDM-SA/T 150W/942 . Always use the correct lamp for your unit.

## Lamp Installation

Caution! Lamp and metal components get hot during operation. Always disconnect power and allow unit to cool before opening the unit cover.

1. Loosen two screws (B6) on the slide-out lampholder (B2). Don't loosen the middle screw (B3). Pull the lamp holder (B2) out as far as possible, about 10 cm.


2. Remove lamp from packaging. Read lamp instructions. Do not touch lamp bulb with bare hands, as this could damage the lamp. Grasp the lamp stem and wear lint-free gloves.

3a. For Shiva-150™ scanner: Note that the CDM-SA/T 150W/942 lamp stem has two pegs, one thicker than the other. Match the pegs with the holes in the lamp socket. Insert the pegs into the lamp socket.

3b. For Shiva-200™ scanner: Use HSD-200 lamp ,Same as above procedure.

3c. For Shiva-250™ scanner: Use either EHJ 64655 G6.35 24V/250W (50-hour) or EHJ 64657 G6.35 24V/250W (300-hour) lamp. Both of these lamps have two pegs of the same size. Insert pegs into the lamp Socket.

4. Make sure the lamp is in straight. Push the lamp mechanism (B2) straight back into place and fasten screws (B6) on the lamp holder (B2). If you feel strong resistance when pushing the lamp holder in, stop and clear the path from obstruction.

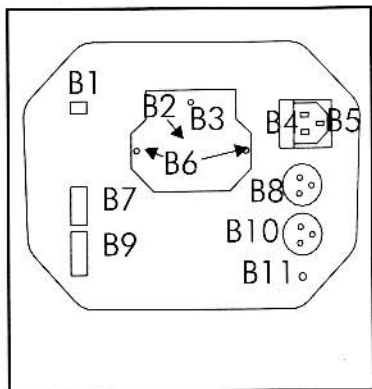

## Scanner Installation

1. Use a 35-kg rated or stronger clamp to secure the scanner bracket (A1) onto a firm truss. Tilt unit as desired and tighten scanner bracket knobs (A5). Allow at least one meter on all sides for proper cooling. Keep unit away from liquids and flammable items. Lastly, pass safety rope (A7) through bracket of the unit, hitch the safety rope round the truss and buckle it up.

2. Link DMX512 signal cables to the DMX sockets B8 and B10 on the back plate of the scanner. "Daisy chain" the scanners as illustrated in the guide *DMX Basics*. Always use high quality, twisted pair 120 ohm shielded, 22 or 24 AWG, braided shield microphone cables and three-pin canon XLR connectors.


3. Set scanner DMX addresses by flipping the appropriate DMX dip switches. For more information, see *Appendix 1*, the *DMX512 Address Chart* and the guide *DMX512 Basics*.

4. Avoid signal interference by flipping Function dip switch #8 to the "on" position on the last scanner in a series of DMX units.

5. Check that your power supply and the specified scanner voltage are the same. Plug mains power cord into the IEC socket (B5) on the back of unit. Plug the mains power cord into properly grounded power supply.

6. The lamp will light (but may be covered by the shutter). You might hear the color and gobo wheels reset and pause. New scanners sometimes smoke and emit an odor briefly as paint and dust are burnt away.

7. external flexible cable or cord of this luminaire is damaged, it shall be replaced by a special cord or cord exclusively available from the manufacturer or his service agent.

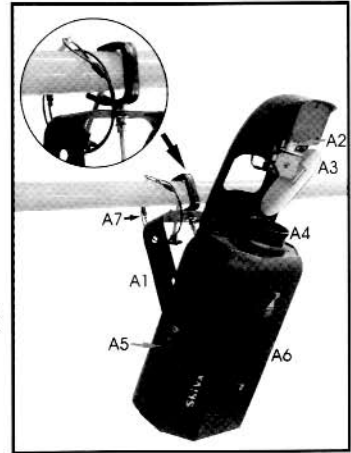

## Focusing the Lens

1. Set Function dip switch #7 to the "on" position.

2. The scanner shutter will open, pan and tilt will align to center, and a small white spot will appear for easy focusing.

3. Rotate lens to obtain a sharp focus.



# SECTION 2 - OPERATION

## DMX512 Control

Proper DMX512 addresses must be set on each scanner. Appendix 1 includes a chart of standard addressing for the four-channel Shiva-150/200/250™ scanner. Refer to *DMX512 Basics* for more information.

### Channel Control Positions

When using a DMX controller, channels correlate with scanner functions. So when you move a slider on the color channel, for example, the colors will change. Shiva-150/200/250™ scanner channels follow:







Channel 1 Colors	Channel 2 Strobe and Gobos	Channel 3 Pan	Channel 4 Tilt
---------------------	----------------------------------	------------------	-------------------

Please refer to *Appendix 2, the DMX Channel Control Diagram*, for a more detailed explanation of effect positions.











### Function Settings

Function settings are designed to make installation and programming convenient and fast. Simply activate a Function dip switch to get the option you want.

#### Function Dip Switch Diagram

<p>#1 Off  Single or two-color blends are possible. (Color wheel stops at any position.)</p>	<p>#1 On  Only single colors are possible. (Color wheel stops only at single color positions.)</p>
<p>#2 Off  Not used.</p>	<p>#2 On  Not used.</p>
<p>#3 Off  X-axis (pan) movements progress from left to right.</p>	<p>#3 On  X-axis (pan) movements progress from right to left.</p>



## Function Dip Switch Diagram (Cont.)

<p>#4 Off  N 1 2 3 4 5 6 7 8 Y-axis (tilt) movements progress from bottom to top.</p>	<p>#4 On  N 1 2 3 4 5 6 7 8 Y-axis (tilt) motions progress from top to bottom.</p>
<p>#5 Off  N 1 2 3 4 5 6 7 8 Exterior control mode. For use with any DMX controller.</p>	<p>#5 On  N 1 2 3 4 5 6 7 8 Self-test function. Scanner runs through a set pattern of movements.</p>
<p>#6 Off  N 1 2 3 4 5 6 7 8 Exterior control mode. For use with any DMX controller.</p>	<p>#6 On  N 1 2 3 4 5 6 7 8 Slow-motion program. A pre-set slow-motion lighting show is activated.</p>
<p>#7 Off  N 1 2 3 4 5 6 7 8 Exterior control mode. For use with any DMX controller.</p>	<p>#7 On  N 1 2 3 4 5 6 7 8 Focus assistance is activated. A gobo appears for easy focusing.</p>
<p>#8 Off  N 1 2 3 4 5 6 7 8 Exterior control mode. For use with any DMX controller.</p>	<p>#8 On  N 1 2 3 4 5 6 7 8 DMX512 signal termination; activate this function dip switch on the last in a series of DMX units to maintain a clear signal.</p>

## Service Dip Switches

Service dip switches are aids to technicians working on Shiva-150/200™ scanner. They have two functions, both of which are explained below.

### Service Dip Switch Diagram

#1 On  N 1 2	Motor power supply is "off" while lamp is lit.
#2 On  N 1 2	Motor power supply is "on" while lamp is not lit.

For general use, do not activate Service dip switches.

Note that Shiva-250™ scanner does not have service dip switches.

## Maintenance

Warning: Disconnect power and let unit cool before handling. Never open unit cover when in use. Keep away from water and other liquids.

Lamps have special characteristics that should be observed to prolong their use. Wait about ten minutes after disconnecting electric power to Shiva-150/200™ scanner before supplying power again. The CDM-SA/T 150W/942 and HSD-200 lamp will not relight immediately after being turned off. Wait about one minute after disconnecting power to Shiva-250™ scanner before supplying power again. Even though halogen lamps, like EHJ 64657 G6.35 24V/250W, restart quickly after being extinguished, wait one minute to protect scanner electronics.

To maintain maximum brightness, clean the unit regularly with a damp cloth or glass cleaner.

1. Wipe lens clean regularly.
2. Keep internal optical path free from dust or cobwebs.
3. Clean internal parts once a year with a brush and strong vacuum cleaner.

## Lamp Removal

To remove lamps, follow the directions below. Always disconnect power supply and allow unit to cool before changing lamps or opening the unit cover.

1. Loosen two screws (B6) on the slide-out lamp holder (B2). Do not loosen the middle screw (B3). Pull the lamp holder (B2) out as far as possible, about 10 cm.
2. With one hand on the lamp socket and the other on the stem of the lamp bulb, pull the lamp stem away from the socket.
3. Dispose lamps properly. Keep used lamps away from children and animals.

## Trouble-shooting

The following trouble-shooting guide is provided to help product users solve minor problems. Always refer servicing to a qualified technician.

Problem: Lamp is not lit and fan is not turning. (Fan can be seen through the back panel.)

Solution:

1. Check electric mains for proper power connection. Check that the power supply matches product power supply specifications.
2. Check the fuse. First, disconnect mains power supply. Use a flat-head screwdriver to pry open the fuse holder casing (B4) near the IEC socket (B5). If the fuse is discolored, rather than clear, replace it. A replacement fuse is provided in the fuse holder (B4). Always use appropriate type of fuse. (See *Product Specifications*.)

Problem: Lamp light is not visible but fan is turning.

Solution:

1. Adjust your DMX controller sliders to open the scanner shutter channel, channel 1. Refer to Appendix 2 and controller instruction manual if necessary.
2. Check DMX512 dip switch settings. Make sure the unit is addressed properly. Make sure that Function dip switches 1-5 and 7 are off.
3. Disconnect DMX512 cable. Turn on Function dip switch #4, activating the self-test function. If scanner operates properly, the DMX signal cable or connector is likely at fault. Replace the DMX cable.
4. Disconnect power. Let unit cool. Check lamp. If lamp is cracked or discolored, rather than clear, replace it. See *Lamp Installation* and *Lamp Removal* sections for details.
5. If lamp is not discolored or cracked, reinsert it. Close the lamp holder, tightening two screws (B6) securely. Connect power.
6. Disconnect power. Refer servicing to a qualified technician.

# APPENDIX 1

## DMX Addressing Chart

DMX512 Dip switches and values have the following relationship:

Dip Switch	1	2	3	4	5	6	7	8	9
DMX Value	1	2	4	8	16	32	64	128	256
















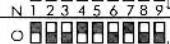

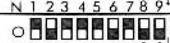






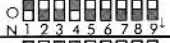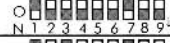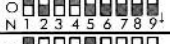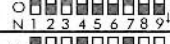

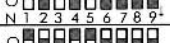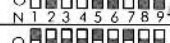

This means, for instance, that the first DMX dip switch has a DMX value of 1, and the fifth DMX dip switch has a value of 16.

Since each Shiva-150/200/250™ scanner has 4 channels, starting addresses would be set as follows: First scanner starting address = 1; Second scanner starting address = 5, etc.

Use a ball-point pen or toothpick to set dip switch addresses appropriately.


See the guide DMX512 Basics for more information.

*For convenience, Shiva-150/200/250™ scanner starting addresses for 28 units and corresponding DMX dip switch settings are listed below.*

SHIVA	Address	Dip Switches	SHIVA	Address	Dip Switches
Unit 1	1		Unit 15	57	
Unit 2	5		Unit 16	61	
Unit 3	9		Unit 17	65	
Unit 4	13		Unit 18	69	
Unit 5	17		Unit 19	73	
Unit 6	21		Unit 20	77	
Unit 7	25		Unit 21	81	
Unit 8	29		Unit 22	85	
Unit 9	33		Unit 23	89	
Unit 10	37		Unit 24	93	
Unit 11	41		Unit 25	97	
Unit 12	45		Unit 26	101	
Unit 13	49		Unit 27	105	
Unit 14	53		Unit 28	109	

# APPENDIX 2


## DMX Channel Control Diagram

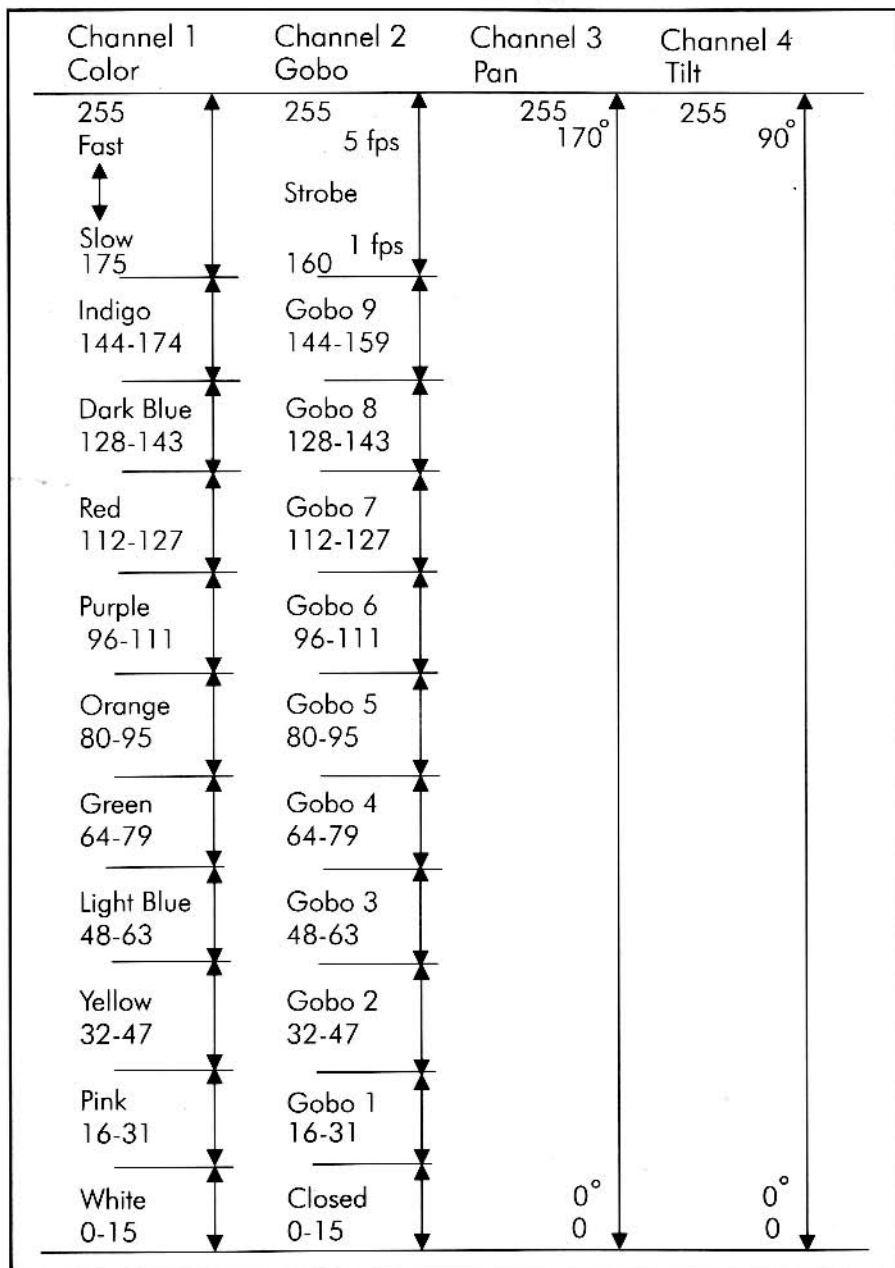


# APPENDIX 3

## SHIVA-150/200/250™ Scanner Gobos

**Gobo 1**

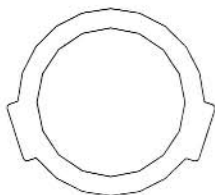


**Gobo 2**

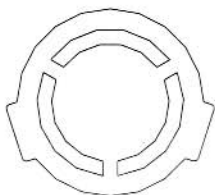


**Gobo 3**




**Gobo 4**

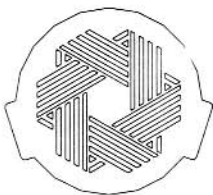


**Gobo 5**

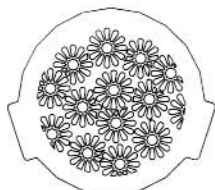


**Gobo 6**

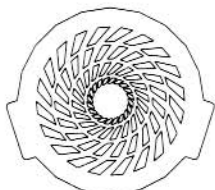


**Gobo 7**

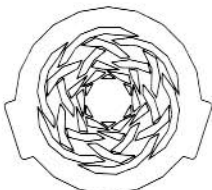

**Gobo 8**

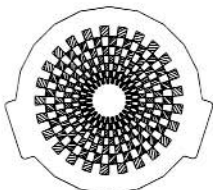


**Gobo 9**

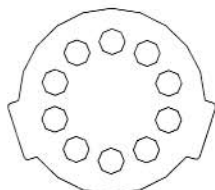

**Gobo 10**




**Gobo 11**

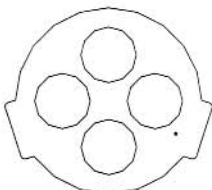


**Gobo 12**




**Gobo 13**

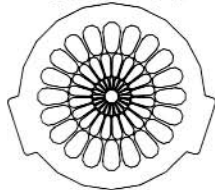


**Gobo 14**

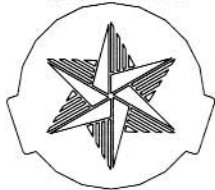

**Gobo 15**

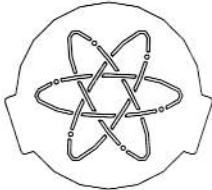


**Gobo 0**

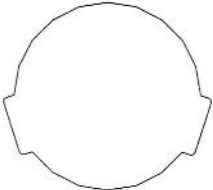

**Note: Gobos 0-9 are standard in Shiva-150/200/250™ scanners. Gobos 10-15 are also available. Please ask your Geni dealer for details.**

# APPENDIX 4

## Gobo Dimensions

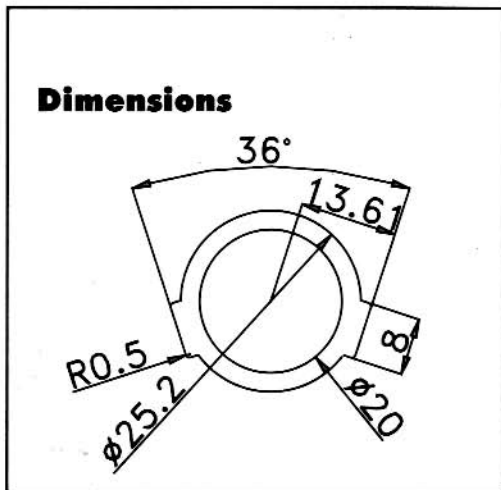

**Note:**

**Shiva-150/200/250™ scanner gobos can be used in these two models only. Do not install gobos from these scanners into other units.**

**Shiva-150/200/250™ scanner gobos are not suitable for use in rotating gobo scanner models Shiva-150R/200R/250R™.**